

圖 11 玻璃杯



圖 11 玻璃杯

圖 11 玻璃杯 2000 年



□□□□

10000□□□□□□


20□□□□□□

20□□□□

20□□□□□□

Armani Zara□□□□□□

.

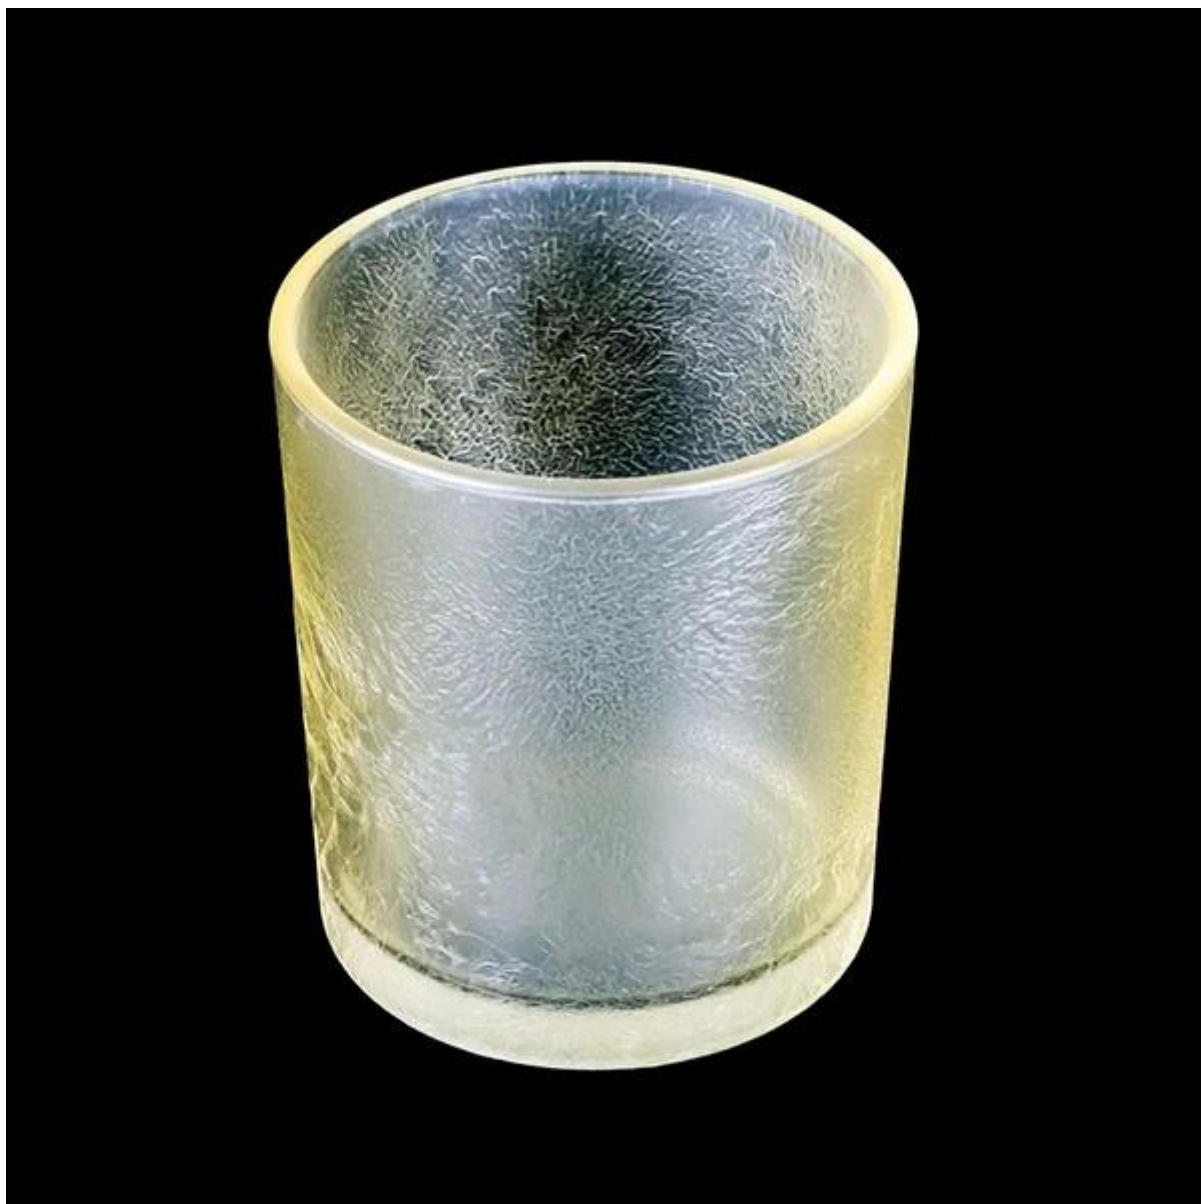


Cupwind [www.cupwind.com](#) OEM & ODM

Professional Manufacturer of Glass Tumblers

Since 1998, Cupwind has been

Cupwind [www.cupwind.com](#) .



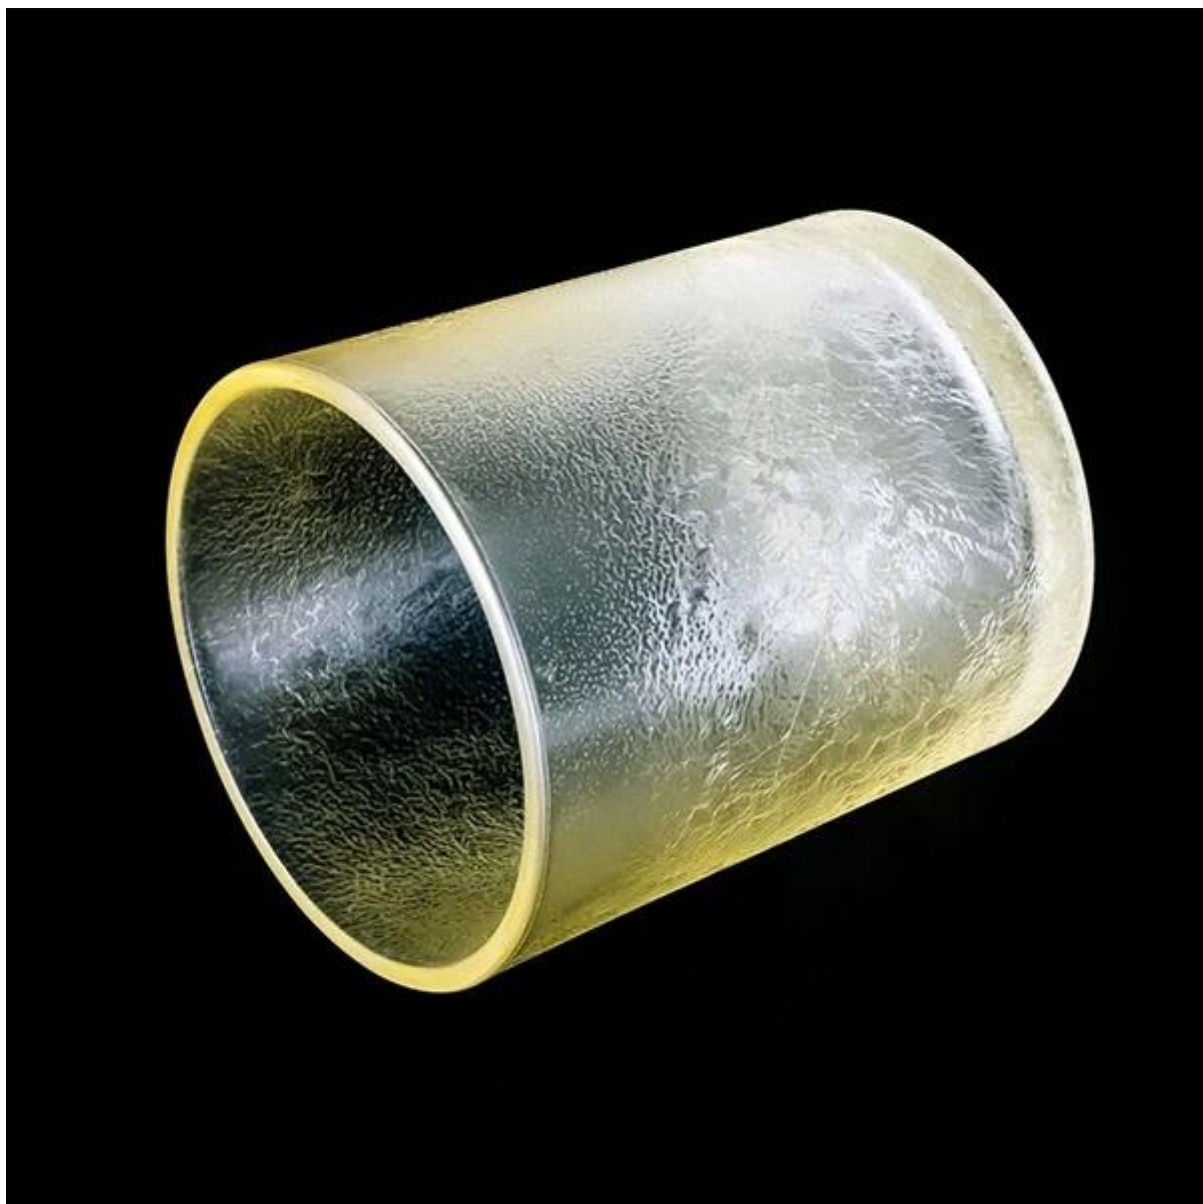



TEST REPORT

SHENZHEN JIERUMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HONGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (852) 3087-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING	
PASS	<u> X </u>
FAIL	<u> </u>
DATA	<u> </u>

TESTING FOR
CA 65 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:		DESCENDANT COATING CANDLE JAR	
Manufacturer:	CUPWIND COOPERATED FACILITY	P.O. No.:	/
Buyer:	PRV	Style:	
Country of Origin:	CHINA	Country of Destination:	USA
Commodity Code:	RESIDENTIAL	SKU Number:	110MAR 0090
Brand Name:	CUPWIND®		
Re-test:	Yes: ☐ No: ☐	Change Vendor:	Yes: ☐ No: ☐
Previous Report No.:	/		



Page 3 of 4

EXECUTIVE SUMMARY:

Test content		Result Rating		
CA 10 Laid & Caisson on non-food/overage glassware interface		Moist Heat		
Effectiveness of annealing	ASTM F2729-96 Sec. 4.2 (NAI)	With a nitrogen candle source, transfer once around the inside knuckle of the article. Then position an "X" mark on the inside knuckle surface of the article. All samples are to be made using sufficient pressure to just penetrate the surface of the glass. Fill sample with water at the same room temperature as the glass. Wait 15 minutes. Then apply the water and examine each piece for fractures. Each piece is to fracture. Report the number of fractures, if any, for each test.	M	PA33
Thermal shock	ASTM F2729-96 Sec. 4.2 (M2) / ASTM C144	Modification: expanded scope to all other glass products in addition to canteen containers. Soak test sample in liquid at 215 ± 1°C (420 ± 1°F) for 15 minutes. Remove sample, prepare a cold-water bath at 21 ± 1°C (70 ± 1°F). Transfer a hot sample at 217 ± 1°C (415 ± 2°F) immerse the sample completely in the cold water bath and allow to settle for 15 ± 1 minutes. Transfer the sample to the cold bath and immerse for at least 30 s. Remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container - the subsequent immersion - the time of transfer from the hot bath to the cold bath shall be 15 ± 1 s Modification: sampling procedure not followed and expanded scope to all other glass products in addition to canteen containers.	M	PA33

REMARK.


1. Not reviewed/protocol for test results in this report.

□ □ □ □ □

□ □ □ □ □ □ □ □ □ □

000000 opp 00000024 0/48 0/72 0/144 0000000000000000

□ □

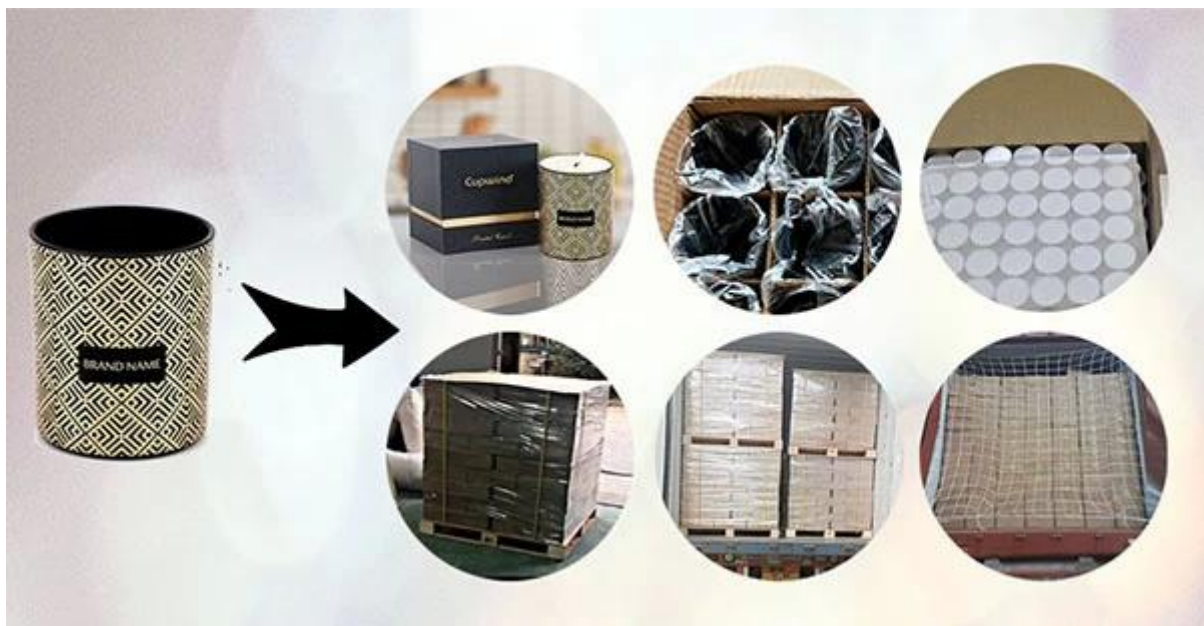

--	--	--	--	--	--	--	--

Cupwind



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed



Gift Box.



Gift Box