

Wild Bluebell



10000

20

20

20

Armani Zara

.



~~~~~ Wild Bluebell ~~~~

~~~~~ 3000 ~~~~~





[Cupwind 8](#)





TEST REPORT



8521097-0435
Page 3 of 4

SHENZHEN JIERUMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHEN ROAD,
HENGGAO, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: 8521097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS ☒
FAIL ☐
DATA ☐

TESTING FOR CA 95 LEAD & CADMIUM ON NON-FOOD BEVERAGE GLASSWARE-EXTERIOR

| | | | |
|---------------------|---|-------------------------|---|
| Sample Description: | IRIDESCENT COATING CANDLE JAR | P.O. No.: | |
| Manufacturer: | CUPWIND COOPERATED FACILITY | Style: | |
| Buyer: | PST | Country of Origin: | CHINA |
| Country of Origin: | CHINA | Country of Destination: | USA |
| Color: | IRIDESCENT | SKU Number: | ITEM# 8090 |
| Brand name: | CUPWIND® | Re-test: | Yes: ☐ No: ☒ |
| Charge Vendor: | Yes: ☒ No: ☐ | Previous Report No.: | 7 |

EXECUTIVE SUMMARY:

| Test content | | Result Rating | | |
|--|---|--|---|------|
| CA 95 Lead & Cadmium on non-food/beverage glassware-exterior | | Meet Pass | | |
| Effectiveness of annealing | ASTM F2175-20 Sec. 4.2 (A6) | With a larger circle scribe, scratch twice around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. | M | PASS |
| Thermal shock | ASTM F2175-20 Sec. 4.2 (A6) / ASTM C149 | Modification: expanded scope to all other glass products in addition to candle containers. That not crack or break after tested per below:
- prepare a cold water bath at 21 ± 1.1°C (70 ± 2°F);
- prepare a hot bath at 71 ± 1.1°C (160 ± 2°F);
- immerse the sample completely in the hot water bath and allow to soak for 1 min ± 15 s;
- transfer the sample to the cold bath; and
- immerse for at least 30 s;
- remove the sample from the cold bath and examine the sample for any cracking.
Note:
- the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion.
- the time of transfer from the hot bath to the cold bath shall be 15 ± 1 s.
Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers. | M | PASS |

REMARK:


1. No enclosed protocol for test results in this report.



XXXXXXXXXXXX

XXXXXXXX opp XXXXXXX24 1/48 1/72 1/144 XXXXXXXXXXXXXXX

XX

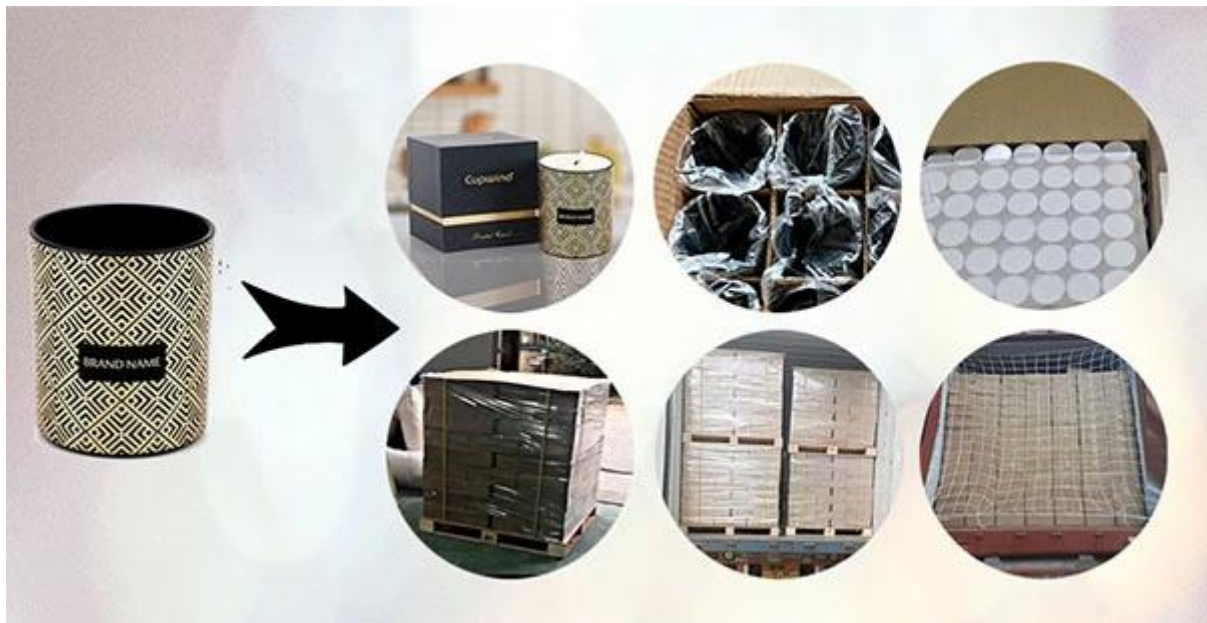



[Cupwind](#)



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed

Gift Box.



Gift Box