

Luxuriöse dekorierte 200-ml-Diffusorflasche aus Schilfrohrglas



Das Diffusorglas ist in der Lage, verschiedene Pantone-Farben zu versprühen, wodurch es gut zu verschiedenen Designs von Kerzengläsern und Duftdüften passt. Es ist perfekt für Heimdekoration, Aromatherapie, Spa, Meditation, Badezimmer.




Zu diesem Diffusor mit handgefertigtem Aquarelldesign gibt es das passende Kerzendesign. Es ist ein sehr gut passendes Heimdekorprodukt für Kunden. Die leere Glasdiffusorflasche ist auch eine gute Vase für Blumen, einfach und klassisch.



Cupwind ist einer der professionellsten [Hersteller von Diffusorflaschen aus Schilfglas in China](#). Wir verfügen über eine eigene Dekorationswerkstatt, um die Qualität der Duftstoffflasche vor dem Versand zu überwachen.



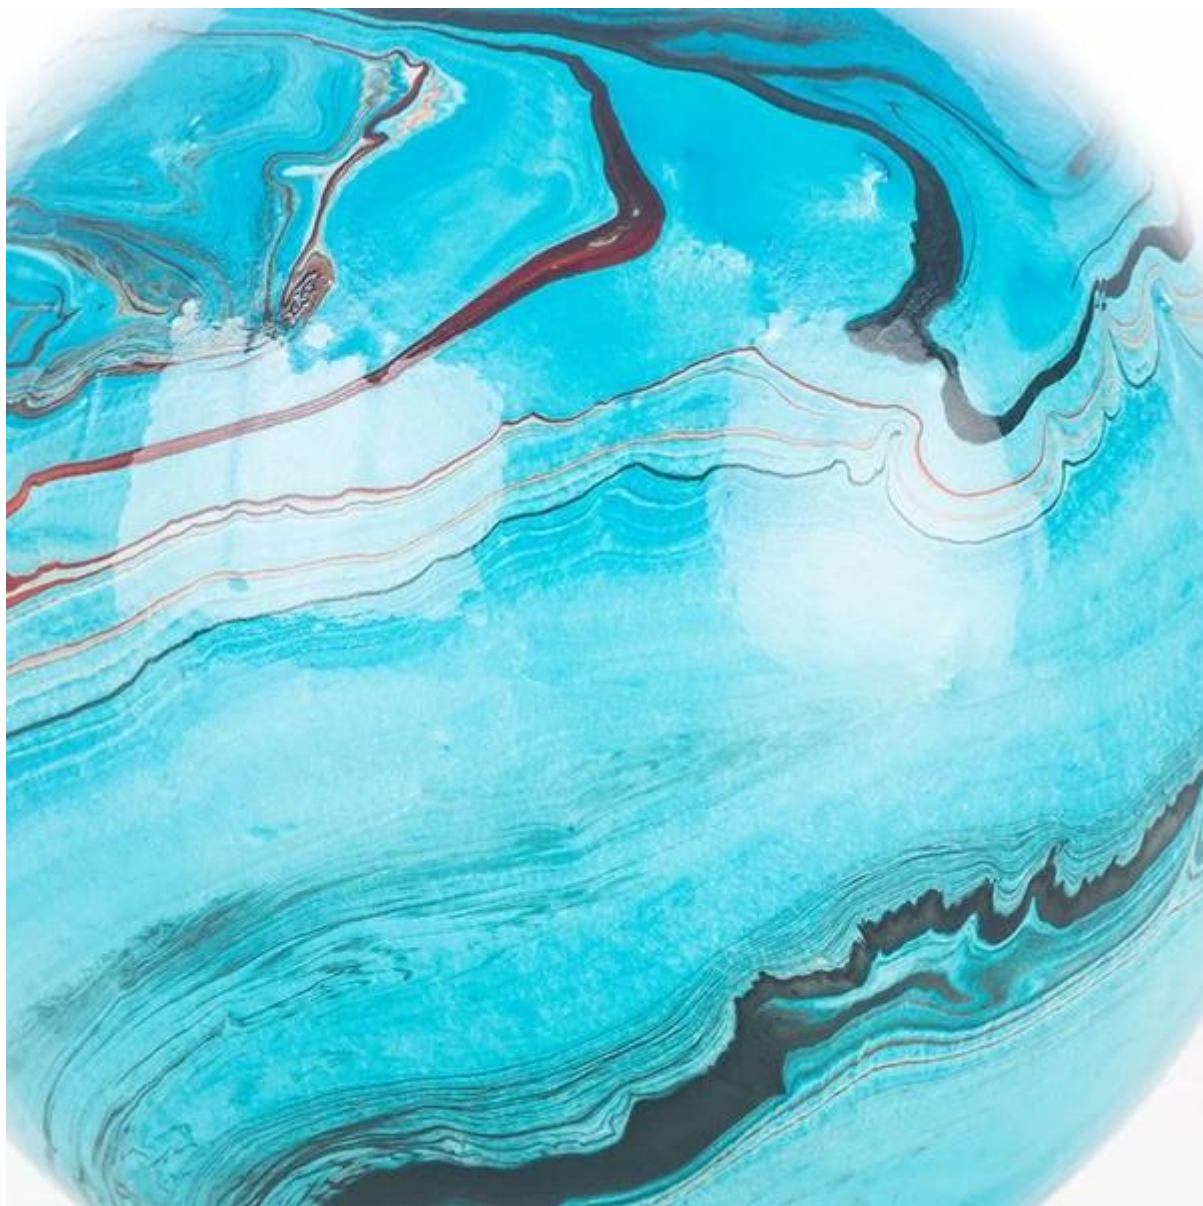







Cupwind bietet auch weiteres Zubehör an, das mit der Reed-Diffusor-Flasche in Zusammenhang steht, wie Reed, Plug, Geschenkbox, Stopfen usw.

Wir haben seit Jahren 6 stabile Kooperationspartner. Die Qualität passt hervorragend zu unseren Kerzenhaltern.



Accessories That Related

With requests of our customers, Cupwind also offers accessories such as gift box for scented candles, wick tool set like wick trimmer, cutter, snuffer, lids in wood and metal like stainless steel and zinc alloy.



Zinc Alloy Lid

Wick Trimmer Cutter



Wooden Lid

Tin metal lid



Glass Lid

Stopper



Neck

Reed



Gift Box

Gift Box



Wir bieten auch OEM- und ODM-Geschenkbboxen für Reed-Diffusorflaschen an. Wenn keine Geschenkbbox erforderlich ist, wickeln wir üblicherweise jede Glasdiffusorflasche in einen Gegenbeutel ein, um sie vor Staub und Staub zu schützen. Wellpappkartons mit Kreuztrennwänden. Holzpaletten sind beim Transport immer effizient, und wir werden an der Türrstelle ein Baumwollnetz anbringen, um beim Öffnen der Containertür vor Stürzen zu schützen.



Alle unsere Glasbestellungen werden von einem Dritten getestet. Normalerweise verwenden wir Cali 65 Pro-Tests, ASTM-Tests (Glühen und Thermoschock) sowie Blei- und Cadmiumtests.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS ☒
FAIL ☐
DATA ☐

TESTING FOR
CA 65 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED FACILITY	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM#: 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐ No: ☒	Charge Vendor:	Yes: ☒ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content		Result/Rating	
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior		Meet/Pass	
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test.	M PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$) - Immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M PASS

REMARK:

1. No enclosed protocol for test results in this report.