

Interner Sprühglas-Kerzenhalter Großhandel



Cupwind ist erfahren [China interner Sprühglas-Kerzenhalter Großhandel](#), Wir haben unsere eigene Dekorationsfabrik und sind immer auf der Suche nach neuem Handwerk und neuen Dekorationen, um die Kerzenhalter einzigartig zu machen. Alle Farben, die wir verwenden, sind umweltfreundlich und umweltfreundlich.



Der 8-Unzen-Kerzenhalter wird gerne als Behälter für Votivkerzen verwendet, perfekte Größe für Votivgefäße. Es ist ein regelmäßiger Produktionsartikel in unserer Werkstatt. Cupwind hat das ganze Jahr über Lager. Das MOQ für dieses Glas kann so niedrig wie 3000 Stück pro Farbe sein.



Zu dieser 8 haben wir passenden Holzdeckel und Metalldeckeloz Votivkerzenhalter. Das Material des Holzes ist in MDF, Kiefer, Bambus, Buche, Walnuss, Paulownia, Akazie, Gummiholz, Roteiche, Weißeiche, europäische Esche, Ahorn usw. erhältlich. Das Material des Metalls ist in Zinn, Edelstahl, Zink erhältlich Legierung usw.



Cupwind ist führend [China interner Lieferant von Sprühkerzenhaltern](#), wir akzeptieren OEM/ODM kundenspezifisches Design. Wir können Ihre eigene Form mit/ohne Markennamen erstellen. Die Dekoration ist zum Sprühen, Galvanisieren, Metallic-Lackieren, Abziehbild, Heißprägen, Siebdruck, Sandstrahlen, Wassertransfer usw. verfügbar.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed




Gift Box.



Gift Box

Neben Holzdeckeln können wir noch weiteres Kerzenzubehör liefern. Auf Anfrage können wir fertige Produkte mit Kerzen und Geschenkboxen verkaufen.

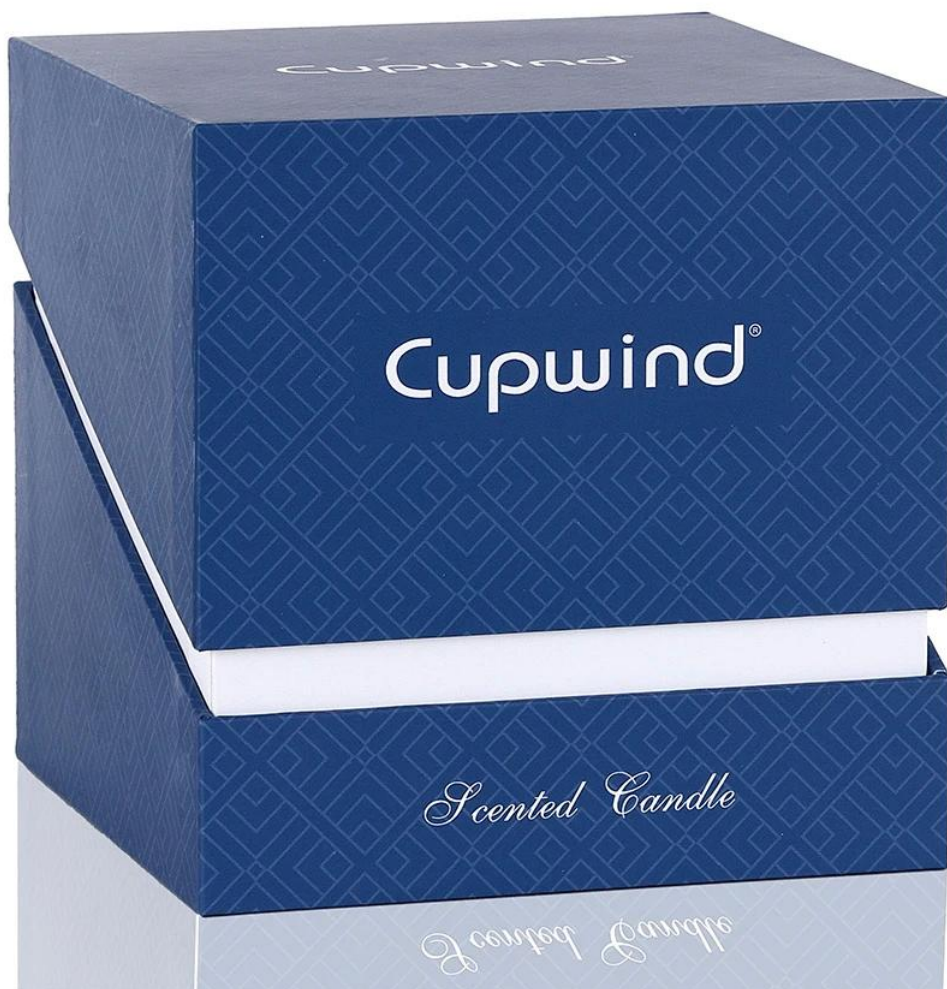

Wir wickeln jedes Kerzenglas in einen Opp-Beutel, um Staub fernzuhalten, und dann in Wellpappenkartons mit Querbrett-Trennwänden. Holzpaletten sind immer effizient für LCL-Sendungen, und wir fügen ein Baumwollnetz an der Tür hinzu, um beim Öffnen der Containertür vor dem Herunterfallen zu schützen.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD.
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS ☒
FAIL ☐
DATA ☐

TESTING FOR CA 65 LEAD & CADMIUM ON NON-FOOD/ BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR
Manufacturer:	CUPWIND COOPERATED FACILITY
Buyer:	IPSV
Country of Origin:	CHINA
Color:	IRIDESCENT
Brand name:	CUPWIND®
Re-test:	Yes: ☐ No: ☒
Previous Report No.:	/

EXECUTIVE SUMMARY:

Test content		Result/Rating	
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior		Meet/Pass	
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	Shall not crack or break after limited per below: - prepare a cold-water bath at $21 \pm 1.1^\circ\text{C}$ ($70 \pm 2^\circ\text{F}$). - prepare a hot bath at $71 \pm 1.1^\circ\text{C}$ ($160 \pm 2^\circ\text{F}$). - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion. - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$. Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M PASS

REMARK:

1. No enclosed protocol for test results in this report.

Alle unsere Glaskerzengläser werden von Dritten getestet. Normalerweise gehen wir mit Cali 65 Pro-Tests, ASTM-Tests (Annealing and Thermal Shock), Blei- und Cadmium-Tests.