

Portavelas único con purpurina de cristal D8.3 x 10.6H



Estos vasos de vela están decorados con purpurina, son diseños únicos creados por Cupwind. Puede pasar la prueba de cinta cruzada y no se puede derretir con aceite de fragancia y alcohol.

El MOQ del recubrimiento es muy pequeño.



Nuestra fuerza

Taller de decoración de 10000 metros cuadrados.

20 tipos de máquinas de decoración diferentes.

20 años de experiencia en el área de decoración.

Apoyo a más de 20 fábricas de vidrio estables.

Fabricación de marcas famosas en todo el mundo como Armani Zara, etc.

[Cupwind es el confiable .](#)



Cupwind ofrece portavelas de vidrio OEM y ODM durante años.

Hemos ayudado a muchos clientes a expandir sus líneas de productos con comentarios positivos.

Tenemos nuestro propio taller de decoración para garantizar la gran calidad.

[Cupwind es un proveedor orientado a la calidad y el servicio de .](#)

APROBACIÓN DE PRUEBA

Cada pedido es probado por terceros con prueba de recocido y choque térmico, prueba de plomo y cadmio antes del envío,




8821097-0425
Page 3 of 4

TEST REPORT

SHENZHEN JIERUMA TRADING CO., LTD
NO.415 RUIJIAN BUILDING, SHENZHU ROAD,
HENGGAANG, 518115, SHENZHEN, CHINA

ATTN: SIMMA ZOU
CC: emma@ougwind.com

LAB LOCATION: SHENZHEN
LAB NUMBER: 085213017-0435

DATE IN: /
MOD. LOG IN: APR 07, 2021
DATE OUT: /
REVISED DATE: APR 13, 2021
WORKING DAYS: 5
PAGE: 2 OF 4

EXECUTIVE SUMMARY:

Test comment	Result Rating	Pass/Fail	
Effectiveness of annealing CA 85 Lead & Cadmium on non-food/beverage glassware-external ASTM F2179-20 Sec. 4.2 (M40)	With a longpin ballbar scriber, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. That show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M	PASS
Thermal shock ASTM F2179-20 Sec. 4.2 (M40) ASTM C149	Shall not crack or break after tested per below - prepare a cold water bath at 21± 1 °C (70 ± 2 °F); - prepare a hot bath at 71 ± 1 °C (160 ± 2 °F); - immerse the sample completely in the hot water bath and allow to soak for 5 min ± 15 s; - transfer the sample to the cold bath, and immerse for at least 30 s; - remove the sample from the cold bath and examine the sample for any cracking. Note: - The hot water that collects within the container during the first immersion shall be splashed in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be 15 ± 1 s. Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M	PASS

OVERALL RATING

PASS X

FAIL

DATA

TESTING FOR
CA 85 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERNAL

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED FACILITY	P.O. No.:	/
Buyer:	SPRY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	10MAR 8060
Brand name:	CUPWIND 8		
Re-test:	Yes: <input type="checkbox"/> No: <input checked="" type="checkbox"/>	Change Vendor:	Yes: <input type="checkbox"/> No: <input type="checkbox"/>
Previous Report No.:	/		

REMARK:


1. No enclosed protocol for test results in this report.

Embalaje de portavelas

Cupwind cuida cada pieza de portavelas con corazón.

Cada portavelas está envuelto en una bolsa de plástico opp, 24 piezas/48 piezas/72 piezas/144 piezas insertadas en una caja de cartón con separadores de huevos.

cargar con palet de madera que es más seguro y eficiente, al final tendremos una red de algodón en el lugar de apertura de la puerta para evitar que se caiga.

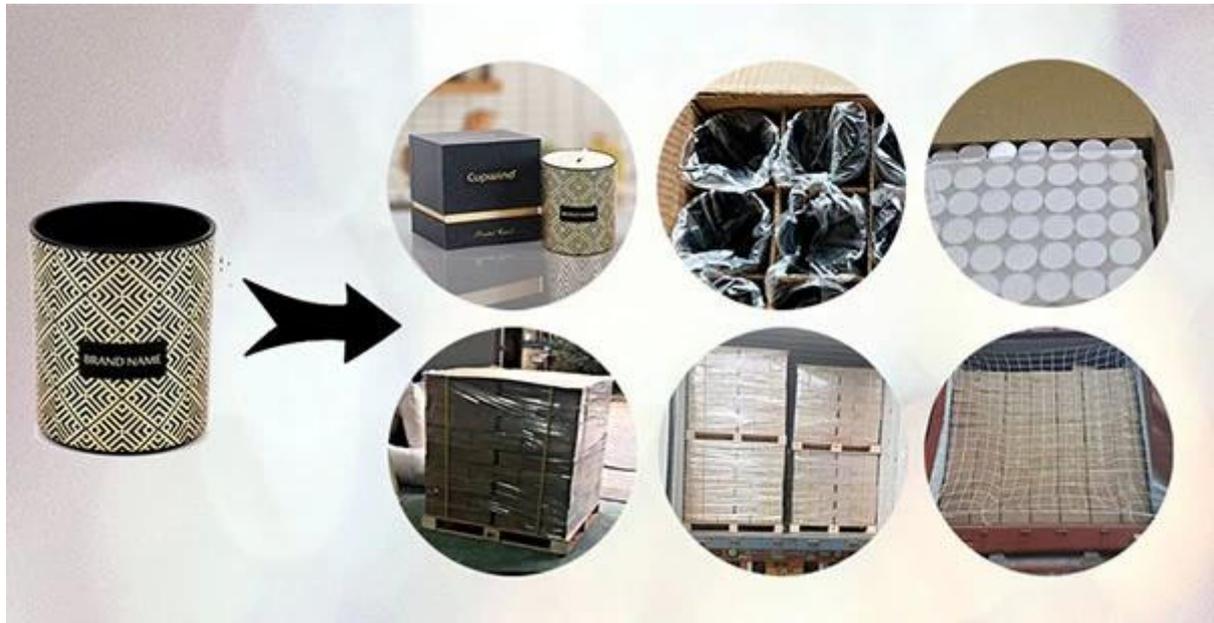

Accesorios relacionados con portavelas

Con las solicitudes de nuestros clientes, Cupwind también ofrece accesorios como caja de regalo para velas perfumadas, juego de herramientas para mecha como cortador de mecha, cortador, apagador, tapas en madera y metal como acero inoxidable y aleación de zinc.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed

Gift Box.



Gift Box