

Portavelas votivo en spray 8OZ Fabricación



Como experimentado [Proveedor de portavelas votivas de China](#), Cupwind siempre está buscando nuevas artesanías y nuevas decoraciones para hacer que los candelabros sean diferentes. Este spray de mezcla de colores se ha desarrollado recientemente, es adecuado para el relleno de cera de 8 oz. Toda la pintura que utilizamos es ecológica y ambiental.



El recipiente para velas de 8 oz es un tamaño popular utilizado por los fabricantes de velas, tamaño perfecto para recipientes votivos. Es un artículo de producción regular en nuestro taller. Cupwind mantiene existencias durante todo el año. El MOQ para este vidrio puede ser tan bajo como 2000 piezas por cada color.



Tenemos tapa de madera y tapa de metal a juego para este 8candelero votivo oz. El material de la madera está disponible en MDF, pino, bambú, haya, nogal, paulownia, acacia, madera de caucho, roble rojo, roble blanco, fresno europeo, arce, etc. El material del metal está disponible en estaño, acero inoxidable, zinc. Aleación, etc



Cupwind es el líder [fábrica de portavelas votivas de china](#), aceptamos diseño personalizado OEM/ODM. Podemos crear su propia forma con o sin marca. La decoración disponible para pulverización, galvanoplastia, pintura metálica, calcomanía, estampado en caliente, serigrafía, chorro de arena, transferencia de agua, etc.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed




Gift Box.



Gift Box

Hay más accesorios para velas que podemos suministrar además de las tapas de madera.
Podemos vender productos terminados con velas y cajas de regalo a pedido.

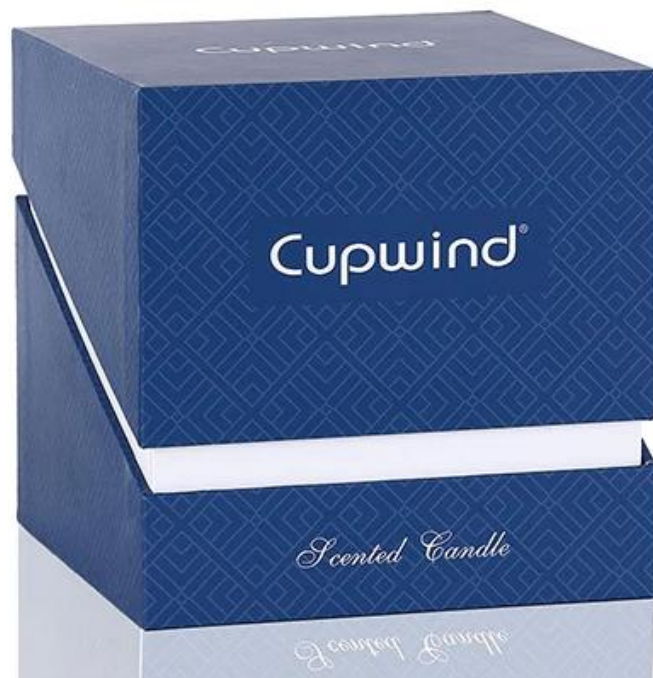

Envolvemos cada vaso de vela en una bolsa de opp para evitar el polvo, luego en cajas de cartón corrugado con divisores de tablas cruzadas. Las paletas de madera siempre son eficientes para los envíos LCL, y agregaremos una red de algodón en el lugar de la puerta para proteger contra caídas al abrir la puerta del contenedor..



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS _____ X
FAIL _____
DATA _____

TESTING FOR CA 65 LEAD & CADMIUM ON NON-FOOD / BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐	No: ☒	Charge Vendor: Yes: ☒ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content		Result/Rating
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior		Meet/Pass
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	M PASS
	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	M PASS
	Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$). - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	

REMARK:

1. No enclosed protocol for test results in this report.

Todos nuestros frascos de vidrio para velas son probados por un tercero. Por lo general, utilizamos pruebas Cali 65 Pro, pruebas ASTM (recocido y choque térmico), pruebas de plomo y cadmio.