

Portavelas de cemento con fragancia para el hogar de The Lovers, 10 onzas, venta al por mayor

Nunca es tarde para decir "te amo". Por eso se creó el portavelas decorativo de cemento "Los Amantes".



Estilo simple, elegante y moderno, tan atractivo para las parejas jóvenes. [Suministro de candelabro de cemento de China](#), eso es lo que ofrece Cupwind.





El MOQ del tarro de vela de cemento al por mayor es de solo 500 piezas. Esto también es amigable para las pequeñas empresas, y también es un buen intento para la nueva exploración de la marca.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGGAANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS ☒
FAIL ☐
DATA ☐

TESTING FOR CA 65 LEAD & CADMIUM ON NON-FOOD / BEVERAGE GLASSWARE-EXTERIOR


Sample Description:	IRIDESCENT COATING CANDLE JAR	P.O. No.:	/
Manufacturer:	CUPWIND COOPERATED FACILITY	Style:	/
Buyer:	IPSY	Country of Origin:	CHINA
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐ No: ☒	Charge Vendor:	Yes: ☒ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content:		Result/Rating
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior		Meet/Pass
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod) With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149 Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$). - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M PASS

REMARK:

1. No enclosed protocol for test results in this report.

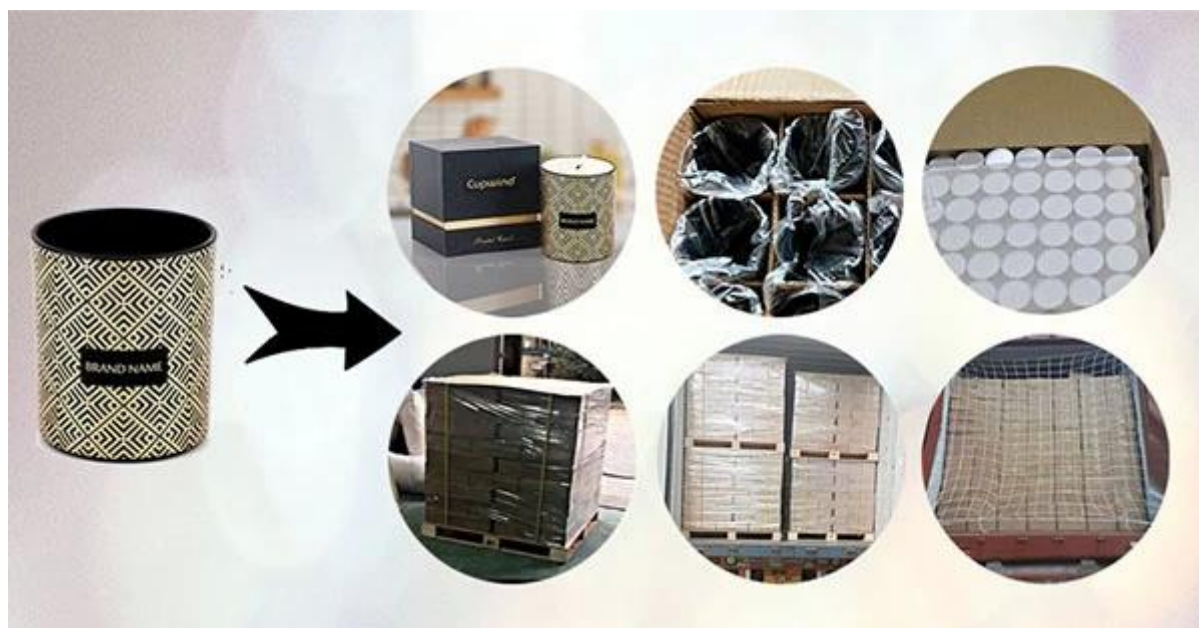

También ofrecemos cajas de regalo al por mayor. Si la caja de regalo no es necesaria, la forma común que usamos es envolver cada portavelas de cemento con una bolsa de opp para evitar el polvo, luego cada caja de cartón empaqueta 48 piezas de portavelas separadas por un separador de huevos. Las paletas de madera siempre son eficientes durante el transporte, y agregaremos una red de algodón en el lugar de la puerta para que no se caiga al abrir la puerta del contenedor.