

## Luxe Décorez la bouteille de diffuseur en verre de roseau de 200 ml



Le verre diffuseur est capable de pulvériser différentes couleurs Pantone, ce qui le rend bien assorti à différents modèles de verre de bougie et de parfums. C'est parfait pour la décoration intérieure, l'aromathérapie, le spa, la méditation, la salle de bain.




Ce diffuseur avec un design aquarelle fait à la main, il y a un design de bougies assorti. C'est un très bon produit de décoration d'intérieur assorti pour les clients. La bouteille diffuseur en verre vide est également un bon vase pour les fleurs, simple et classique.



Cupwind est l'un des plus professionnels [Fabricant de bouteilles de diffuseur en verre à roseaux en Chine](#). Nous disposons de notre propre atelier de décoration pour garder un œil sur la qualité du flacon diffuseur à roseaux avant son expédition.



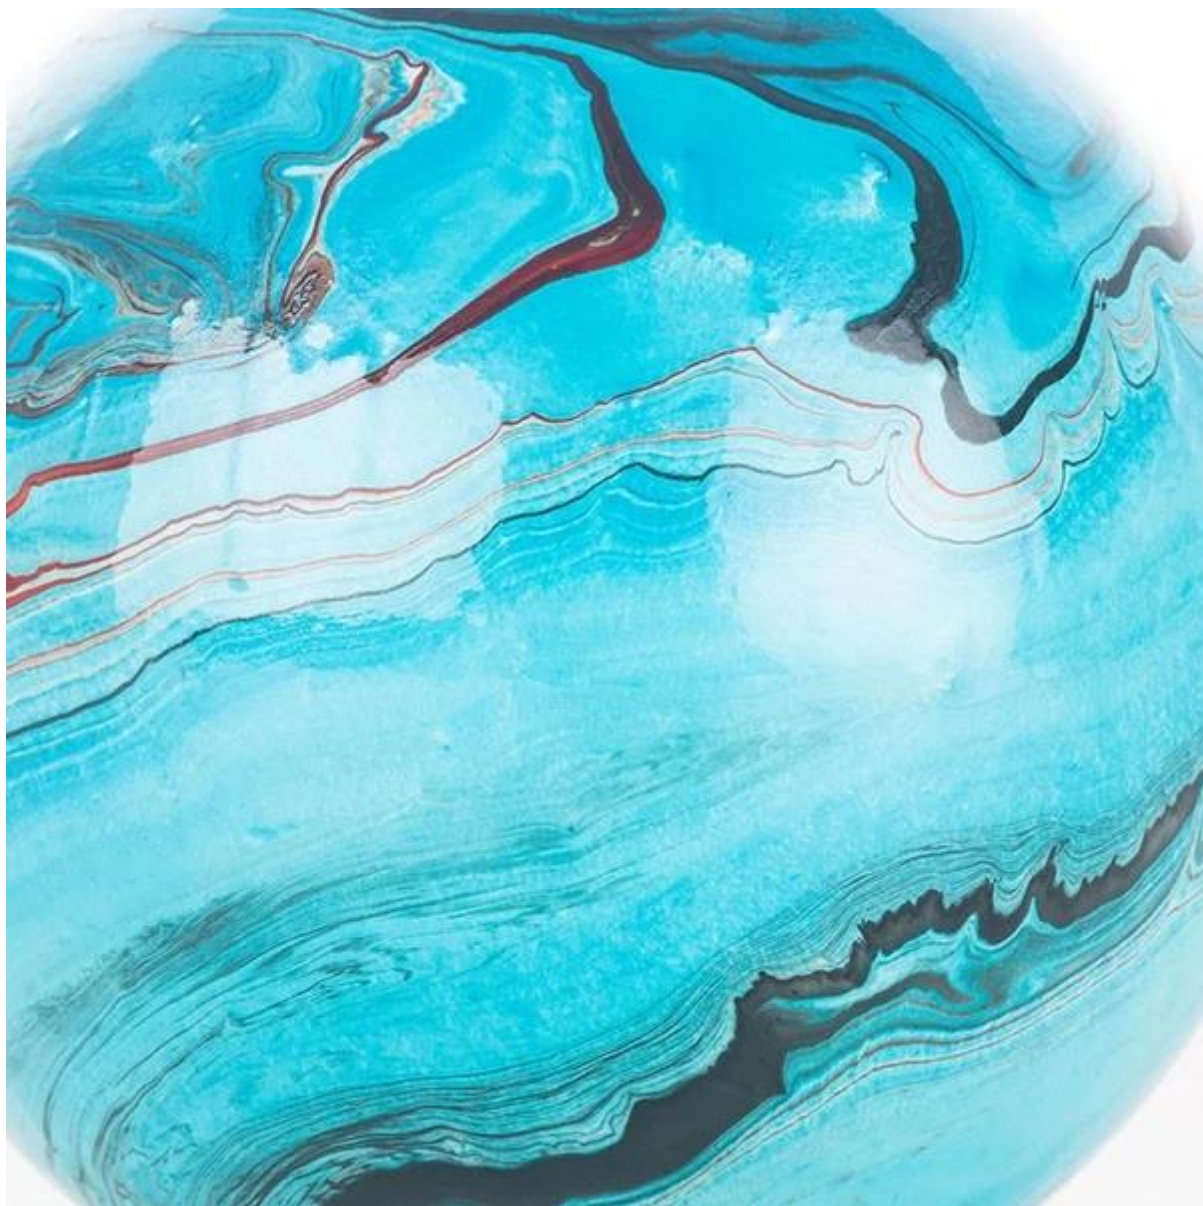







Cupwind propose également d'autres accessoires liés au flacon diffuseur à roseaux tels que le roseau, le bouchon, le coffret cadeau, le bouchon, etc.

Nous avons 6 partenaires coopératifs stables depuis des années. La qualité correspond parfaitement à nos bougeoirs.



## Accessories That Related

With requests of our customers, Cupwind also offers accessories such as gift box for scented candles, wick tool set like wick trimmer, cutter, snuffer, lids in wood and metal like stainless steel and zinc alloy.



Zinc Alloy Lid

Wick Trimmer Cutter



Wooden Lid

Tin metal lid



Glass Lid

Stopper



Neck

Reed



Gift Box

Gift Box



Nous proposons également des coffrets cadeaux OEM et ODM pour les bouteilles de diffuseur à roseaux. Si le coffret cadeau n'est pas nécessaire, la méthode courante que nous utilisons est d'envelopper chaque flacon diffuseur en verre dans un sac opp pour le protéger de la poussière. cartons ondulés avec séparateurs en croix. La palette en bois est toujours efficace pendant le transport, et nous ajouterons un filet de coton à l'endroit de la porte pour éviter les chutes lors de l'ouverture de la porte du conteneur.



Toutes nos commandes de verre sont testées par un tiers. Habituellement, nous effectuons les tests Cali 65 Pro, les tests ASTM (recuit et choc thermique), les tests au plomb et au cadmium.



## TEST REPORT



(8521)097-0435  
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD  
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,  
HENGGAANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN  
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU  
CC: emma@cupwind.com

DATE IN: APR 07, 2021  
MOD. LOG IN: /  
DATE OUT: APR 13, 2021  
REVISED DATE: /  
WORKING DAYS: 5  
PAGE: 2 OF 4

### OVERALL RATING

PASS ☒  
FAIL ☐  
DATA ☐

### TESTING FOR CA 65 LEAD & CADMIUM ON NON-FOOD / BEVERAGE GLASSWARE-EXTERIOR

|                      |                                                                       |                         |                                                                       |
|----------------------|-----------------------------------------------------------------------|-------------------------|-----------------------------------------------------------------------|
| Sample Description:  | IRIDESCENT COATING CANDLE JAR                                         |                         |                                                                       |
| Manufacturer:        | CUPWIND COOPERATED FACILITY                                           | P.O. No.:               | /                                                                     |
| Buyer:               | IPSY                                                                  | Style:                  | /                                                                     |
| Country of Origin:   | CHINA                                                                 | Country of Destination: | USA                                                                   |
| Color:               | IRIDESCENT                                                            | SKU Number:             | ITEM# 8090                                                            |
| Brand name:          | CUPWIND®                                                              |                         |                                                                       |
| Re-test:             | Yes: <input type="checkbox"/> No: <input checked="" type="checkbox"/> | Charge Vendor:          | Yes: <input checked="" type="checkbox"/> No: <input type="checkbox"/> |
| Previous Report No.: | /                                                                     |                         |                                                                       |

### EXECUTIVE SUMMARY:

| Test content                                                 |                                          | Result/Rating                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |        |
|--------------------------------------------------------------|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| CA 65 Lead & Cadmium on non-food/beverage glassware-exterior |                                          | Meet/Pass                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |        |
| Effectiveness of annealing                                   | ASTM F2179-20 Sec. 4.2 (Mod)             | With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test.<br><br>Modification: expanded scope to all other glass products in addition to candle containers.                                                                                                                                                                                                                                                                                                   | M PASS |
| Thermal shock                                                | ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149 | Shall not crack or break after tested per below<br>- prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ( $70 \pm 2^{\circ}\text{F}$ ).<br>- prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ( $160 \pm 2^{\circ}\text{F}$ ).<br>- immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$ .<br>- transfer the sample to the cold bath, and immerse for at least 30 s.<br>- remove the sample from the cold bath and examine the sample for any cracking.<br>Note:<br>- the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion<br>- the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$<br>Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers. | M PASS |

### REMARK:

- No enclosed protocol for test results in this report.