

Sampler barattolo di vetro da farmacia per fare candele grigio 3 oz



Il nostro barattolo di candele da farmacia premium è gofrato con un bellissimo motivo, il coperchio di latta è stampato con colori.

il vetro della candela è spruzzato in grigio che è per la promozione di candele profumate fumose.



Questo barattolo di vetro per candele da farmacia in rilievo è realizzato da I.S. Macchina artigianale, il MOQ è 30000 pezzi.

C'è una cornice sul barattolo di vetro in modo che possiamo aggiungere un adesivo su di esso.



Il coperchio è realizzato in latta di metallo, i modelli e i colori sono personalizzabili da noi.





La nostra forza è che abbiamo la nostra fabbrica di decorazioni per fare un sacco di decorazioni sui contenitori.

Come la serigrafia, [stampa decalcomania](#), galvanica, spray colorati, [iridescente](#) placcatura ecc.



Cupwind è professionale [produttore di barattoli di candele da farmacia](#) in Cina, accettiamo il design personalizzato OEM/ODM e possiamo creare la tua forma con/senza un marchio.

inoltre, offriamo accessori per candele insieme a portacandele, come coperchi in metallo, coperchi in legno, [pacco regalo](#) eccetera.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed



Gift Box.




Gift Box

Con anni di esperienza nella lavorazione dei portacandele, Cupwind sa come proteggere i nostri prodotti.

ogni bicchiere portacandele è stato avvolto da un sacchetto di plastica per tenere lontana la polvere, quindi cartoni ondulati con divisori trasversali.

I pallet in legno sono sempre efficienti per le spedizioni LCL e aggiungeremo una rete di cotone nella parte della porta per evitare che cadano quando si apre la porta del container.

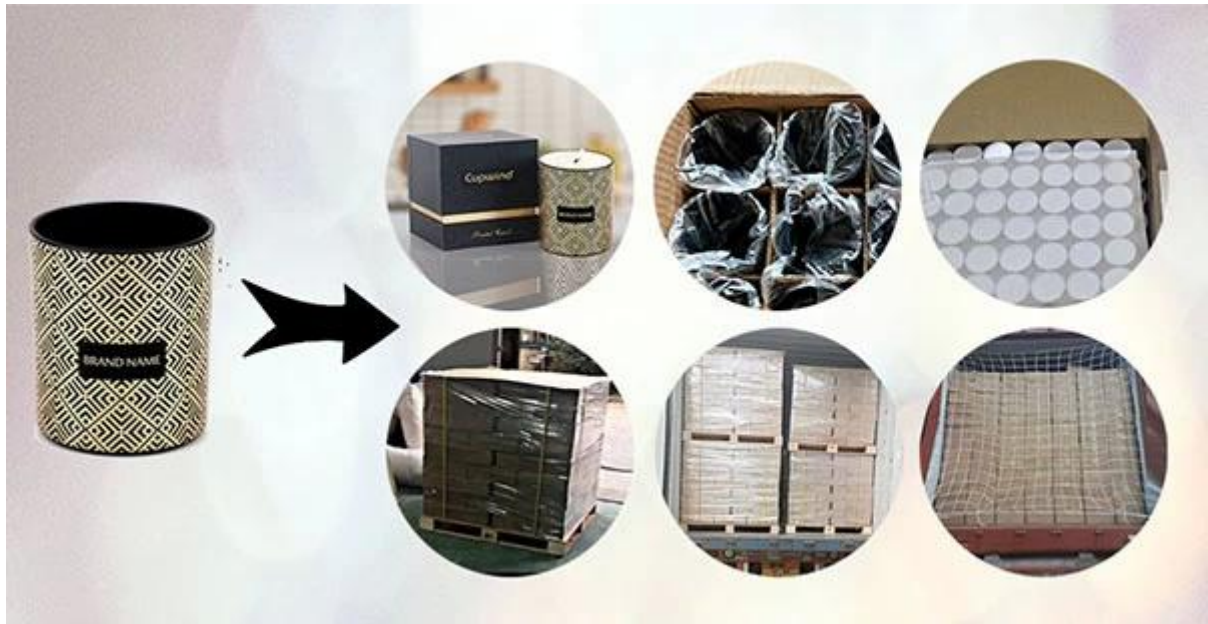

Garanzia di qualità

Abbiamo il nostro team di controllo qualità qualificato ed esperto per verificare la qualità del prodotto dall'inizio della produzione fino alla fine, avremo un rapporto di controllo qualità interno in inglese da mostrarti prima della spedizione.

Tutti i nostri vasetti di candele in vetro sono testati da una terza parte. Di solito andiamo con i test Cali 65 Pro, i test ASTM (ricottura e shock termico), i test sul piombo e sul cadmio.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS _____ X
FAIL _____
DATA _____

TESTING FOR CA 65 LEAD & CADMIUM ON NON-FOOD / BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR
Manufacturer:	CUPWIND COOPERATED P.O. No.: /
Buyer:	IPSY Style: /
Country of Origin:	CHINA Country of Destination: USA
Color:	IRIDESCENT SKU Number: ITEM# 8090
Brand name:	CUPWIND®
Re-test:	Yes: No: X Charge Vendor: Yes: X No: /
Previous Report No.:	/

EXECUTIVE SUMMARY:

Test contents			Result/Rating	
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior			Meet/Pass	
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M	PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	Shall not crack or break after tested per below prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$) - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M	PASS

REMARK:

1. No enclosed protocol for test results in this report.