

「消費者が安心して利用できるように」7月

Q

「消費者が安心して利用できるように」7月

A 「消費者が安心して利用できるように」7月

20 「消費者が安心して利用できるように」7月

「消費者が安心して利用できるように」7月

20 「消費者が安心して利用できるように」7月


「消費者が安心して利用できるように」7月

「消費者が安心して利用できるように」7月

「消費者が安心して利用できるように」7月

7



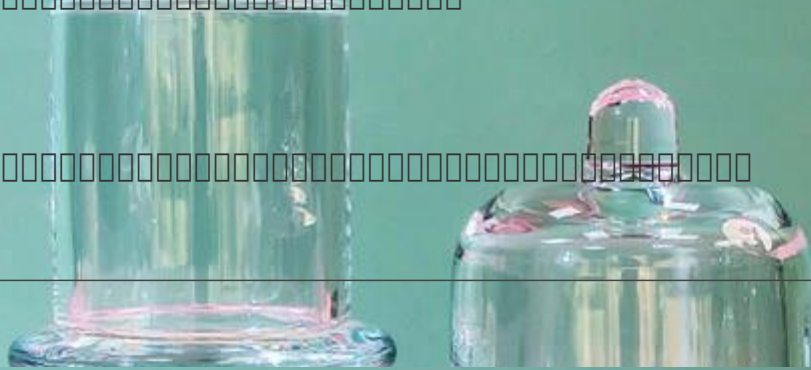

Cupwind OEM / ODM



Wick Trimmer/Cutter Zinc Alloy Lid Wooden Lid
MDF



TEST REPORT



0521097-0425
Page 3 of 4

SHENZHEN JIERUMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGQIANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: 0521097-0435

ATTN: SMDA ZOU
CC: smda@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 08, 2021
TEST DATE: /
CUSHING DAYS: /
PAGE: 2 OF 4

Cali 65 Pro AS

OVERALL RATING
PASS
FAIL
DATA

TESTING FOR CASS LEAD & CADMIUM ON NON-FOOD BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR	P.O. No.:	
Manufacturer:	CUPWIND COOPERATED	Style:	
Buyer:	IPSY	Country of Origin:	CHINA
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM: 9090
Previous Report No.:	17	Shipment Number:	17

EXECUTIVE SUMMARY:

Test content	Result Rating	Result	
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior	Meet Pass		
ASTM F2175-20 Sec. 4.2 (NA6)		With a tungsten carbide scribe, scratch twice around the inside knuckle of the article. Then scratch on "X" across the entire inside bottom surface of the article. At scratches are to be made using sufficient pressure to fully penetrate the surface of the glass. Fill each article with water and allow to soak for 5 min ± 15 s. Examine the sample for any cracking. If any, for each test.	Pass
Thermal shock ASTM F2175-20 Sec. 4.2 (NA6) / ASTM C148		Modification: expanded scope to all other glass products in addition to candle containers. Shall not crack or break after tested per below: - prepare a cold-water bath at 21 ± 1 °C (70 ± 2 °F); - prepare a hot bath at 71 ± 1 °C (160 ± 2 °F); - immerse the sample completely in the hot water bath and allow to soak for 5 min ± 15 s; - transfer the sample to the cold bath and immerse for at least 30 s; - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be 15 ± 1 s. Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	Pass

REMARK:

1. No enclosed protocol for test results in this report.

20

20

20

