

Botol Peresap Kaca Reed 200ml Hias Mewah



Kaca peresap mampu menyembur warna pantone yang berbeza yang menjadikannya dipadankan dengan baik dengan reka bentuk berbeza kaca lilin dan bau wangian. Ia sesuai untuk hiasan rumah, aromaterapi, spa, meditasi, bilik mandi.




Peresap ini dengan reka bentuk cat air buatan tangan, terdapat reka bentuk lilin yang sepadan untuknya. Ia adalah produk hiasan rumah padanan yang sangat baik untuk pelanggan. Botol penyebar kaca kosong juga merupakan pasu yang bagus untuk bunga, ringkas dan klasik.



Cupwind adalah salah satu yang paling profesional [Pengilang botol penyebar kaca reed China](#). Kami mempunyai bengkel menghias kami sendiri untuk mengawasi kualiti botol penyebar buluh sebelum ia dihantar keluar.



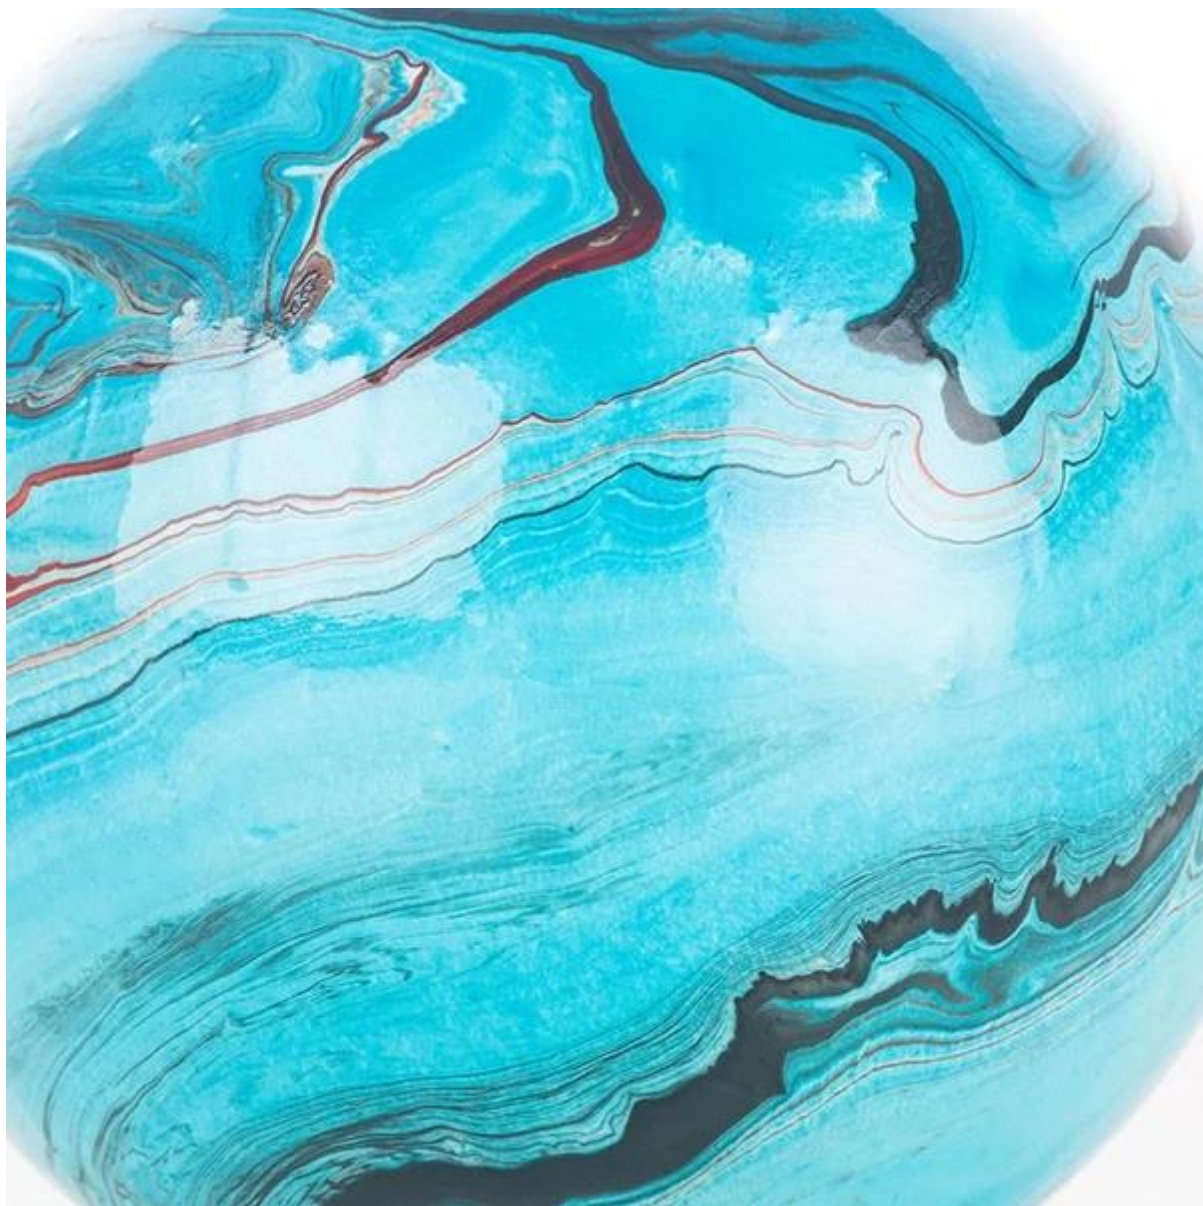







Cupwind juga menawarkan aksesoris lain yang berkaitan dengan botol reed diffuser seperti buluh, palam, kotak hadiah, penyumbat dll.

Kami mempunyai 6 rakan koperasi yang stabil selama bertahun-tahun. Kualitinya sangat sepadan dengan pemegang lilin kami.



Accessories That Related

With requests of our customers, Cupwind also offers accessories such as gift box for scented candles, wick tool set like wick trimmer, cutter, snuffer, lids in wood and metal like stainless steel and zinc alloy.



Zinc Alloy Lid

Wick Trimmer Cutter



Wooden Lid

Tin metal lid



Glass Lid

Stopper



Neck

Reed



Gift Box

Gift Box



Kami juga menawarkan kotak hadiah OEM dan ODM untuk botol penyebar buluh. Jika kotak hadiah tidak diperlukan, cara biasa yang kami gunakan ialah membungkus setiap botol penyebar kaca dengan beg opp untuk mengelakkan daripada habuk, karton beralun dengan pembahagi papan silang. Palet kayu sentiasa cekap semasa dalam pengangkutan, dan kami akan menambah jaring kapas di tempat pintu untuk melindungi daripada jatuh semasa membuka pintu kontena.



Semua pesanan kaca kami diuji oleh pihak ketiga. Biasanya kami menggunakan ujian Cali 65 Pro, ujian ASTM (Annealing and Thermal Shock), ujian Plumbum dan Kadmium.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS ☒ X
FAIL ☐
DATA ☐

TESTING FOR
CA 65 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED FACILITY	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEMF: 8090
Brand name:	CUPWIND 6		
Re-test:	Yes: ☐ No: ☒	Charge Vendor:	Yes: ☒ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content	Result/Rating
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior	Meet/Pass

Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M	PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$) - Immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M	PASS

REMARK:

1. No enclosed protocol for test results in this report.