

Balang Kaca 9oz Buatan Tangan Mewah Untuk Lilin Membuat Bintik Merah Jambu



Kaca itu buatan tangan dengan rupa yang sangat mewah. Cetakan haiwan begitu hangat di pasaran, ia "sebuah produk hiasan rumah yang hebat. Tetapkan meja anda dalam gaya dengan pemegang lilin makan malam, yang juga kelihatan hebat pada ambang tingkap, perapian, pada kabinet atau rak di ruang tamu , bilik air...



Mereka hebat sebagai pesta makan malam, lilin pesta hari jadi, hiasan pusat perkahwinan, hiasan meja untuk restoran. Sesuai sebagai hadiah pemanasan rumah. Sementara itu, cawan kaca yang indah itu bukan sahaja boleh memuatkan lampu teh tetapi juga bunga, tumbuhan, barang kemas, apa sahaja yang anda mahukan!



Kekayaan warna berfungsi dengan baik, terutamanya apabila ia menangkap cahaya. Cantik sendiri atau jika dihiasi dedaunan atau bunga. Gunakan dengan lampu teh atau lilin tiang juga.







Kami mempunyai penutup kayu yang sepadan untuk ini [9 oz lilin c ontainer](#). Bahan kayu boleh didapati dalam MDF, Pine, Buluh, Beech, Walnut, Paulownia, Acacia, Kayu Getah, Red Oak, White Oak, abu Eropah, Maple dll.



Cupwind adalah [Pembekal balang kaca 9oz China](#), kami menerima reka bentuk tersuai OEM/ODM dan kami boleh mencipta bentuk anda sendiri dengan/tanpa nama jenama. Hiasan yang tersedia untuk penyemburan, penyaduran elektrik, lukisan logam, pelekat, setem panas, skrin sutera, sandblast, pemindahan air dll.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed




Gift Box.



Gift Box

Terdapat banyak lagi [aksesori lilin](#) kami boleh membekalkan selain tudung kayu. Kami boleh menjual produk siap dengan lilin dan kotak hadiah atas permintaan.

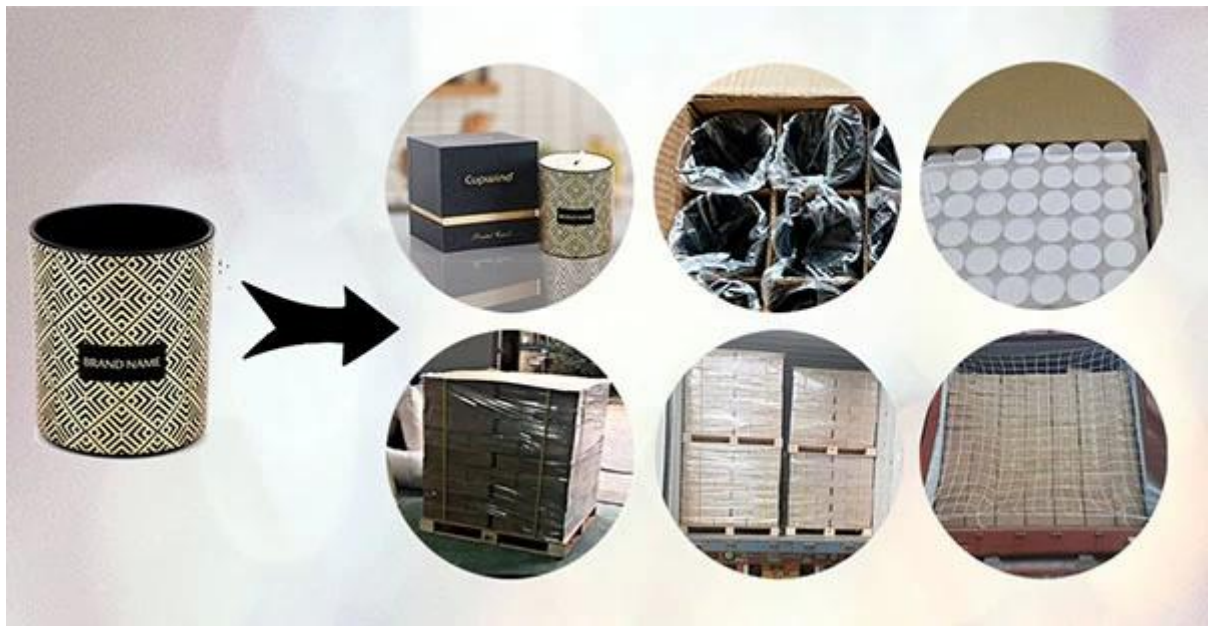

Kami membalut setiap gelas pemegang lilin dengan beg opp untuk menjauhkan diri daripada habuk, kemudian karton beralun dengan pembahagi papan silang. Palet kayu sentiasa cekap untuk penghantaran LCL, dan kami akan menambah jaring kapas di tempat pintu untuk melindungi daripada jatuh apabila membuka pintu kontena.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING	
PASS	X
FAIL	
DATA	

TESTING FOR
CA 65 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐	No: ☒	Charge Vendor: Yes: ☐ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content			Result/Rating	
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior			Meet/Pass	
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M	PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$). - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M	PASS

REMARK:

1. No enclosed protocol for test results in this report.

Semua balang lilin kaca kami diuji oleh pihak ketiga. Biasanya kami menggunakan ujian Cali 65 Pro, ujian ASTM (Annealing and Thermal Shock), ujian Plumbum dan Kadmium.