

## Unikalny świecznik z brokatem Szklany D8,3 x 10,6 H



Te kieliszki do świec ozdobione są brokatami, to właśnie Cupwind stworzył niepowtarzalne wzory.

Może przejść test taśmy krzyżowej i nie może być stopiony z olejkiem zapachowym i alkoholem.

MOQ powłoki jest bardzo mały.



## **Nasza siła**

Warsztaty dekoratorskie o powierzchni 10000 metrów kwadratowych.

20 rodzajów różnych maszyn do zdobienia.

20 lat doświadczenia w dekoratorstwie.

Wsparcie dla ponad 20 stabilnych fabryk szkła.

Znane na całym świecie marki, takie jak Armani Zara itp.

[Cupwind jest niezawodny .](#)



Cupwind od lat oferuje szklany świecznik OEM i ODM.

Pomogliśmy wielu klientom w rozszerzeniu ich linii produktów dzięki pozytywnym informacjom zwrotnym.

Posiadamy własną pracownię dekoratorską, która gwarantuje doskonałą jakość.

[Cupwind jest dostawcą zorientowanym na jakość i usługi .](#)

**ZATWIERDZENIE TESTU**

Każde zamówienie przed wysyłką jest testowane przez strony trzecie z testem wyżarzania i szoku termicznego, testem ołowiu i kadmu,




8821097-0425  
Page 3 of 4

## TEST REPORT

SHENZHEN JIERUMA TRADING CO., LTD  
NO.415 RUIJIAN BUILDING, SHENZHU ROAD,  
HENGANG, 518115, SHENZHEN, CHINA

ATTN: SIMA ZOU  
CC: sima@ougwind.com

LAB LOCATION: SHENZHEN  
LAB NUMBER: 08211097-0435

DATE IN: APR 07, 2021  
MOD. LOG IN: /  
DATE OUT: APR 13, 2021  
REVISED DATE: /  
WORKING DAYS: 5  
PAGE: 2 OF 4

EXECUTIVE SUMMARY:

Test comment	Result Rating	Pass/Fail	
Effectiveness of etching ASTM F2179-20 Sec. 4.2 (M40)	With a longpin cellulosic scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. That show no fractures. Report the number of fractures, if any, for each test.  Modification: expanded scope to all other glass products in addition to candle containers.	M	PASS
Thermal shock ASTM F2179-20 Sec. 4.2 (M40) ASTM C149	Shall not crack or break after tested per below: - prepare a cold water bath at 21 ± 1 °C (70 ± 2 °F); - prepare a hot bath at 71 ± 1 °C (160 ± 2 °F); - immerse the sample completely in the hot water bath and allow to soak for 5 min ± 15 s; - transfer the sample to the cold bath and immerse for at least 30 s; - remove the sample from the cold bath and examine the sample for any cracking. Note: - The hot water that collects within the container during the first immersion shall be splashed in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be 15 ± 1 s. Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M	PASS

OVERALL RATING

PASS  X

FAIL

DATA

TESTING FOR  
CAs LEAD & CADMIUM ON NON-FOOD /  
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED FACILITY	P.O. No.:	/
Buyer:	SPRY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	10MAR 8060
Brand name:	CUPWIND®		
Re-test:	Yes: <input type="checkbox"/> No: <input checked="" type="checkbox"/>	Change Vendor:	Yes: <input checked="" type="checkbox"/> No: <input type="checkbox"/>
Previous Report No.:	/		

REMARK:

1. No enclosed protocol for test results in this report.


## Opakowanie świeczników

Cupwind z sercem dba o każdy kawałek świecznika.

Każdy świecznik jest owinięty plastikową torbą opp, 24 szt. / 48 szt. / 72 szt./144 szt. Włożony do kartonowego pudełka z przegródkami na jajka.

Ładowanie paletą drewnianą, która jest bezpieczniejsza i wydajniejsza, w końcu będziemy mieli bawełnianą siatkę w miejscu otwierania drzwi, aby zapobiec jej upadkowi.



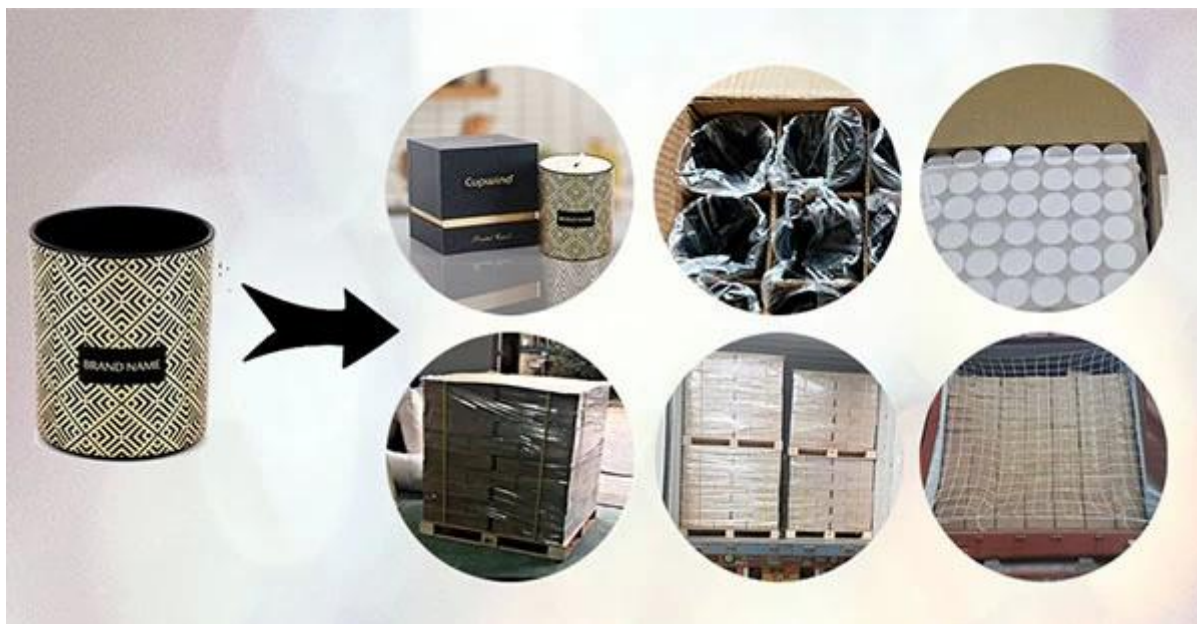

## Aksesoria związane ze świecznikami

Na prośby naszych klientów Cupwind oferuje również akcesoria, takie jak pudełko upominkowe na świecę zapachowe, zestaw narzędzi do knota, taki jak obcinacz do knota, obcinacz, tłumik, pokrywki z drewna i metalu, takiego jak stal nierdzewna i stop cynku.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed

Gift Box.



Gift Box