

## Home Accessories Glass Dome, Small Candle Cloche

This glass dome is machine pressed product, it's thick and sturdy, elegant.



It's perfect accessory for scented candles and a good decoration at home, office, spa place.



Cupwind is a quality-oriented and service-oriented [glass dome supplier china](#). We offer OEM & ODM service for years, our products are highly recommended by our customers.



Cupwind offers more than just one decoration on the candle jar glass, we have our decoration workshop which is 10000m<sup>2</sup> space and have more than 20 different crafts to get multiple decorations on the [candle holders](#), you'll see some of them on the picture below.



Each order is tested by third parties with annealing and thermal shock test, lead and cadmium test before shipping out, which assured our customers for years, here below is one of a test report for [iridescent candle holder glass](#).



## TEST REPORT



8521097-0435  
Page 3 of 4

SHENZHEN JIERUMA TRADING CO., LTD  
NO.415 RUNLIAN BUILDING, SHENZHEN ROAD,  
HENGGAO, 518115, SHENZHEN, CHINA

ATTN: EMMA ZOU  
CC: emma@cupwind.com

LAB LOCATION: SHENZHEN  
LAB NUMBER: 8521097-0435

DATE IN: APR 07, 2021  
MOD. LOG IN: /  
DATE OUT: APR 13, 2021  
REVISED DATE: /  
WORKING DAYS: 5  
PAGE: 2 OF 4

**EXECUTIVE SUMMARY:**

Test content	Result	Rating	Used Date
CA 85 Lead & Cadmium on non-food/beverage glassware-exterior			
Effectiveness of annealing	ASTM F2175-20 Sec. 4.2 (M0)	With a long-term annealing cycle, scratch once around the inside touch of the article. Then scratch on "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test.	M PASS
Thermal shock	ASTM F2175-20 Sec. 4.2 (M0) / ASTM C149	Modification: expanded scope to all other glass products in addition to candle containers. Shall not crack or break after tested per below: - prepare a cold water bath at 21±1.1°C (70±2°F); - prepare a hot bath at 71±1.1°C (160±2°F); - immerse the sample completely in the hot water bath and allow to soak for 5 min ± 15 s; - transfer the sample to the cold bath, and immerse for at least 30 s; - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion; - the time of transfer from the hot bath to the cold bath shall be 15 ± 1 s. Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M PASS

**REMARK:**  
1. No witnessed protocol for test results in this report.

**TESTING FOR  
CA 85 LEAD & CADMIUM ON NON-FOOD /  
BEVERAGE GLASSWARE-EXTERIOR**

Sample Description: IRIDESCENT COATING CANDLE JAR			
Manufacturer:	CUPWIND COOPERATED	P.O. No.:	
Buyer:	SPRY	Style:	
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	1704MF-0090
Brand name:	CUPWIND®		
Re-test:	Yes: <input type="checkbox"/> No: <input checked="" type="checkbox"/>	Change Vendor:	Yes: <input type="checkbox"/> No: <input type="checkbox"/>
Previous Report No.: 17			

**OVERALL RATING**


PASS	X
FAIL	
DATA	

## Packaging of Candle Holders

Cupwind takes care of each piece of candle holders with heart. Each candle holder is wrapped by opp plastic bag, 24pcs/48pcs/72pcs/144pcs inserted into a carton box with egg dividers.



loading with wooden pallet which is safer and more efficient, in the end, we will have a cotton net at the door opening place to stop it from falling.

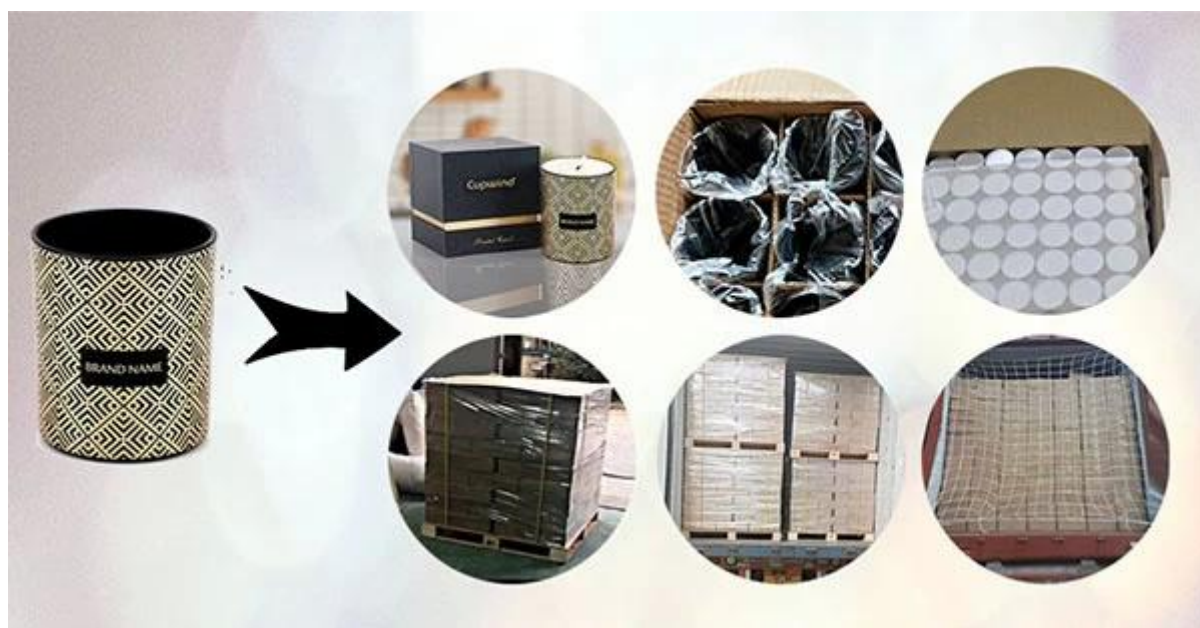

## Accessories that related to Candle Holders

With requests of our customers, Cupwind also offers [accessories](#) such as [gift box](#) for scented candles, [wick tool set](#) like wick trimmer, cutter, snuffer, lids in wood and metal like stainless steel and zinc alloy.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed

Gift Box.



Gift Box

## Workshop Tour

