

Frasco difusor de junco branco de fragrância para casa 8,5 onças

Este frasco difusor de junco branco pode conter óleo de fragrância de 8,5 onças. É um produto quente no mercado.

O design exclusivo faz com que pareça lindo e perfeito para decoração de casa, aromaterapia, spa, meditação, banheiro.

É uma boa partida com [castiçal branco](#) também.



O frasco difusor de junco branco vazio também é um bom vaso para flores, simples, mas elegante.

Te traz alegria e amor.



Cupwind é um dos mais profissionais [garrafa de difusor de junco branco fabrica na China](#)

Temos nossa própria oficina de decoração para ficar de olho na qualidade da garrafa difusora de junco antes de ser enviada

O pedido de pedido desta garrafa difusora de corpo redondo é de 5000 peças



A Cupwind também oferece outros acessórios relacionados ao frasco difusor de palheta, como palheta, plugue, caixa de presente, rolha etc.

Temos 6 parceiros cooperativos estáveis há anos. A qualidade é uma ótima combinação com nossos castiçais.

Plugue para garrafa difusora



Rolha para frasco difusor



Reed para frasco difusor






Também oferecemos caixa de presente OEM e ODM para garrafas de difusor de junco.

Se a caixa de presente não for necessária, a maneira comum que estamos usando é embrulhar cada copo de castiçal em um saco opp para evitar poeira,

então cada caixa de papelão embalando 48 peças de vidro de vela separado por um divisor de ovo. Palete de madeira é sempre eficiente durante o transporte,

e adicionaremos uma rede de algodão no local da porta para evitar quedas ao abrir a porta do contêiner.

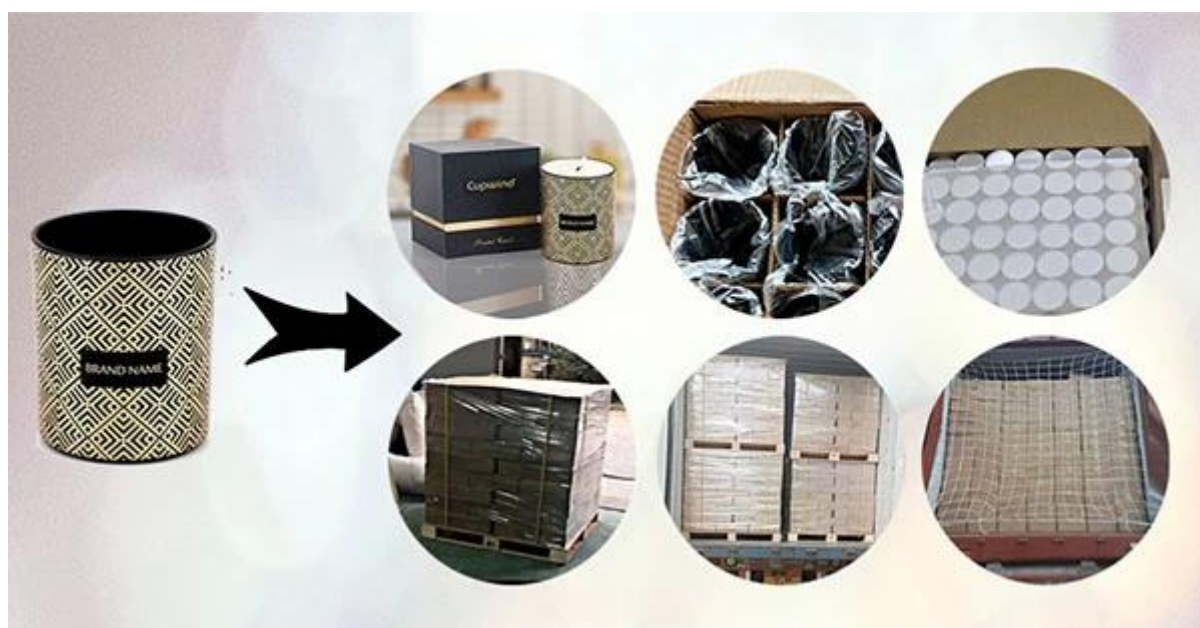

Todos os castiçais de vidro que enviamos são testados por terceiros
Os testes que sempre fazemos gostam dos testes de recozimento e choque térmico

Testes Cali 65 Pro

Testes de chumbo e cádmio



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS _____ X
FAIL _____
DATA _____

TESTING FOR CA 65 LEAD & CADMIUM ON NON-FOOD / BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐	No: ☒	Charge Vendor: Yes: ☐ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test contents			Result/Rating	
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior			Meet/Pass	
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M	PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	Shall not crack or break after tested per below prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$) - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M	PASS

REMARK:

1. No enclosed protocol for test results in this report.