

**Título: Fornecimento de jarra de vela Iridescentee
8 onças**



Nossa força

[Fabricante de jarra de vela iridescente de 8 onças China](#)

10000 metros quadrados de propriedade da oficina de decoração.

20 tipos de máquinas de decoração diferentes.

20 anos de experiência na área de decoração.

20 fábrica de vidro cooperativo estável, fábrica de cerâmica, fábrica de caixa de presente, fábrica de tampa de metal, suporte de fábrica de tampa de madeira.

Marcas mundialmente famosas como Porsche, Armani, Zara etc.

Iridescent [jarra de vela](#) é realmente NOVA TENDÊNCIA no mercado, seja qual for nos Estados Unidos, ou Europa ou Austrália, não apenas no frasco de vela, mas também usado em copo de água, copo de cerveja, garrafa de uísque, copo de vinho ou até mesmo nos frascos de vela de cerâmica, como a Starbucks usa na caneca de cerveja e no copo de água.

CARACTERÍSTICA DO PRODUTO



O pedido de pedido do frasco de vela iridescente é de apenas 1000 peças, o que é adequado para pequenas empresas. É uma espécie de galvanoplastia, mas muito mais colorida. Fornecemos frascos de velas iridescentes há mais de 20 anos. Primeiramente foi feito na chaminé da lâmpada. As pessoas gostaram muito desse belo efeito e consideraram fazê-lo no frasco de velas que foi uma ótima idéia. Existem poucas fábricas na China que podem fazer este jarro de vela iridescente em qualidade de luxo.

Acessórios



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed



Gift Box.



Gift Box

Temos alguns acessórios para sua escolha, como tampa de madeira e bambu, tampa de metal, bandeja de madeira, conjunto de aparador etc.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGGAANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 12, 2021
RECEIVED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING

PASS ☒
FAIL ☐
DATA ☐

TESTING FOR
CA, LEAD & CADMIUM ON NON-FOOD/
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR	P.O. No.:	/
Manufacturer:	CUPWIND COOPERATED CANDLE FACILITY	Style:	/
Buyer:	IPSY	Country of Origin:	CHINA
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐ No: ☒	Charge Vendor:	Yes: ☒ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content	Result Rating
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior	Most/Pass
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)
Shatter shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149
Thermal Shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149


With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made in the same direction. The scribe shall be held at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each glass for fractures. 1. Shake the water bath. Repeat the number of fractures, 1 sample for each test.

Modification: expanded scope to all other glass products. In addition to candle containers, glass products of other shapes and sizes are included. - prepare a hot water bath at 71 ± 1.1°C (160 ± 2°F). - immerse the sample completely in the hot water bath and allow to soak for 5 min ± 10 s. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be 15 ± 1 s. Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.

REMARK:

1. No enclosed protocol for test results in this report.

EMBALAGEM

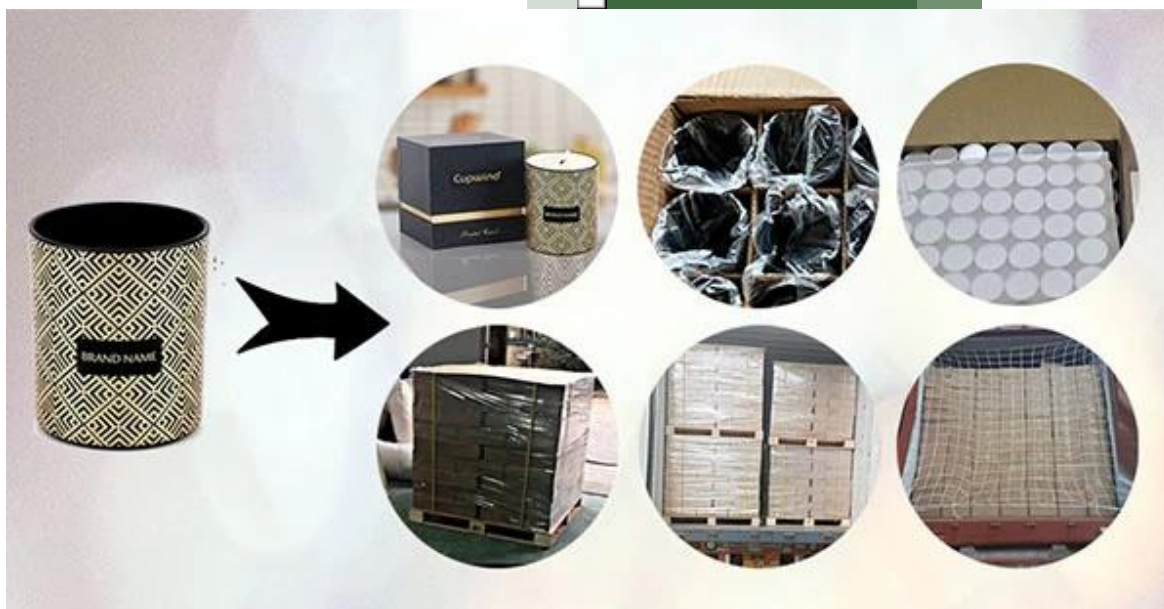

Cada vidro é embrulhado por um saco opp, então 48 peças em uma caixa de papelão com divisores de ovos. Paletes de madeira são sempre recomendados durante o transporte, o que é muito mais seguro. Teremos uma rede de corda de algodão no local da porta do contêiner

para mantê-lo seguro.