

Spray castiçal votivo 8OZ Fabricação



Como experiente [Fornecedor de castiçal votivo da China](#), a Cupwind está sempre procurando novos artesanatos e novas decorações para tornar os castiçais diferentes. Este spray de mistura de cores é recém-desenvolvido, adequado para enchimento de cera de 8 onças. Todas as tintas que usamos são ecologicamente corretas e ambientais.



O vaso de vela de 8 onças é um tamanho popular usado por fabricantes de velas, tamanho perfeito para vaso votivo. É um item de produção regular em nossa oficina. Cupwind mantém estoque durante todo o ano. O MOQ para este vidro pode ser tão baixo quanto 2000 peças por cada cor.



Temos tampa de madeira e tampa de metal combinando para este 8oz castiçal votivo. O material da madeira está disponível em MDF, Pinho, Bambu, Faia, Nogueira, Paulownia, Acácia, Madeira de Borracha, Carvalho Vermelho, Carvalho Branco, Freixo Europeu, Maple etc. Liga etc



Cupwind é líder [fábrica de castiçais votivos da china](#), aceitamos design personalizado oem/odm. Podemos criar sua própria forma com/sem marca. A decoração disponível para pulverização, galvanoplastia, pintura metálica, decalque, estampagem a quente, tela de seda, jato de areia, transferência de água etc.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed




Gift Box.



Gift Box

Existem mais acessórios para velas que podemos fornecer além das tampas de madeira. Podemos vender produtos acabados com velas e caixas de presente mediante solicitação.

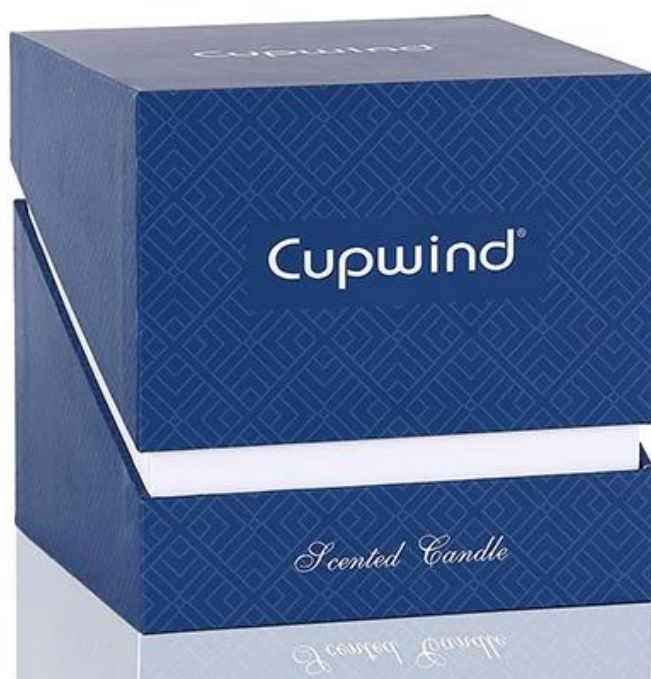

Embrulhamos cada vidro de vela por um saco opp para evitar poeira, depois caixas de papelão ondulado com divisórias cruzadas. Paletes de madeira são sempre eficientes para remessas LCL, e adicionaremos uma rede de algodão no local da porta para proteger contra quedas ao abrir a porta do contêiner.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING	
PASS	X
FAIL	
DATA	

TESTING FOR
CA 65 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐	No: ☒	Charge Vendor: Yes: ☐ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content		Result/Rating		
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior		Meet/Pass		
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	M	PASS
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$). - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	M	PASS

REMARK:

1. No enclosed protocol for test results in this report.

Todos os nossos frascos de vela de vidro são testados por terceiros. Normalmente vamos com testes Cali 65 Pro, testes ASTM (Annealing and Thermal Shock), testes de chumbo e cádmio.