

Аромат для дома White Reed Diffuser Bottle 8.5oz

Эта бутылка с диффузором из белого тростника вмещает 8,5 унций ароматического масла. Это горячий продукт на рынке.

Уникальный дизайн делает его великолепным и идеальным для домашнего декора, ароматерапии, спа, медитации, ванной комнаты.

Это хороший матч с [белый подсвечник](#) также.



Пустая бутылка с диффузором из белой тросточки также является хорошей вазой для цветов, простой, но элегантной.

Это приносит вам радость и любовь.



Cupwind — один из самых профессиональных [бутылка с диффузором из белого тростника производится в Китае](#)

У нас есть собственная мастерская по декорированию, чтобы следить за качеством бутылок с тростниковыми диффузорами перед их отправкой.

Минимальный объем заказа этой бутылки с диффузором круглой формы составляет 5000 шт.



Cupwind также предлагает другие аксессуары, связанные с бутылкой с тростниковым диффузором, такие как тростник, заглушка, подарочная коробка, пробка и т. д.

У нас есть 6 стабильных партнеров по сотрудничеству в течение многих лет. Качество отлично сочетается с нашими подсвечниками.

Заглушка для флакона с диффузором



Пробка для флакона с диффузором



Трость для диффузора






Мы также предлагаем подарочные коробки OEM и ODM для бутылок с тростниковыми диффузорами.

Если подарочная коробка не нужна, обычно мы используем обертку каждого стекла подсвечника полиэтиленовым пакетом, чтобы защитить его от пыли,

Затем каждая картонная коробка упаковывает 48 шт. стекла для свечей, разделенных разделителем для яиц. Деревянный поддон всегда эффективен при транспортировке,

и мы добавим хлопчатобумажную сетку в место двери, чтобы защитить от падения при открытии двери контейнера.

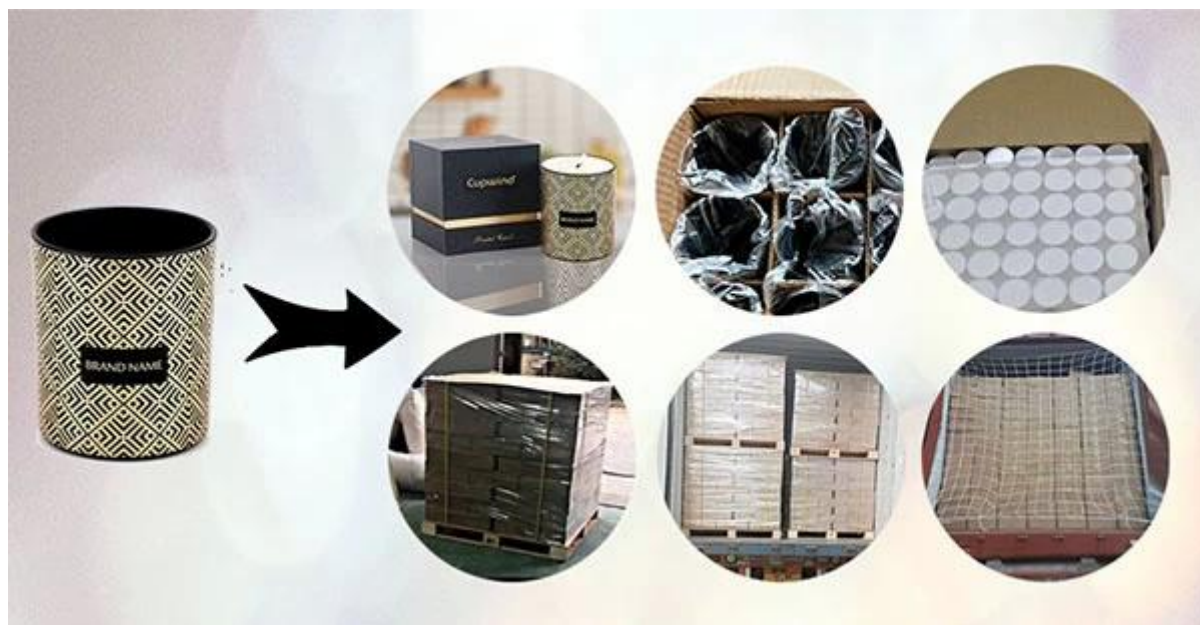

Все стеклянные подсвечники, которые мы отправляем, тестируются третьей стороной.

Тесты, которые мы всегда проводим, такие как тесты на отжиг и тепловой удар

Кали 65 Pro тесты

Тесты на свинец и кадмий



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING	
PASS	X
FAIL	
DATA	

TESTING FOR
CA 65 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐	No: ☒	Charge Vendor: Yes: ☐ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content		Result/Rating
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior		Meet/Pass
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	M PASS
	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	M PASS
	Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$) - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	

REMARK:

1. No enclosed protocol for test results in this report.