

Стеклянная аптекарская банка для пробоотборника для изготовления свечей, серая, 3 унции



Наша аптечная банка для свечей премиум-класса украшена красивым тиснением, а на жестяной крышке нанесена цветная печать.

стекло свечи окрашено в серый цвет, что способствует продвижению дымчатых ароматических свечей.



Стеклянная банка для аптечной свечи с тиснением изготовлена И.С. Машинное ремесло, минимальный объем заказа составляет 30000 шт.

На стеклянной банке есть рамка, так что мы можем наклеить на нее наклейку.



Крышка изготовлена из металлической жести, узоры и цвета доступны по индивидуальному заказу.





Наша сила в том, что у нас есть собственная фабрика по декорированию контейнеров.

Например, шелкография, [печать наклеек](#), гальваника, цветные спреи, [радужный покрытие](#) и т.д.



Купвинд профессионал [производитель аптекарских баночек для свечей](#) в Китае мы принимаем индивидуальный дизайн OEM / ODM, и мы можем создать вашу собственную форму с / без торговой марки.

кроме того, мы предлагаем аксессуары для свечей вместе с подсвечниками, такие как металлические крышки, деревянные крышки, [подарочная коробка](#) и т. д.



Wick Trimmer Cutter



Zinc Alloy Lid



Wooden Lid



Neck



Stopper



Reed

Gift Box.




Gift Box

Обладая многолетним опытом работы с подсвечниками, Cupwind знает, как защитить нашу продукцию.

каждое стекло подсвечника было обернуто полипропиленовым пакетом для защиты от пыли, а затем гофрированными коробками с поперечными разделителями.

Деревянные поддоны всегда эффективны для перевозки LCL, и мы добавим хлопчатобумажную сетку в месте двери, чтобы защитить от падения при открытии двери контейнера..

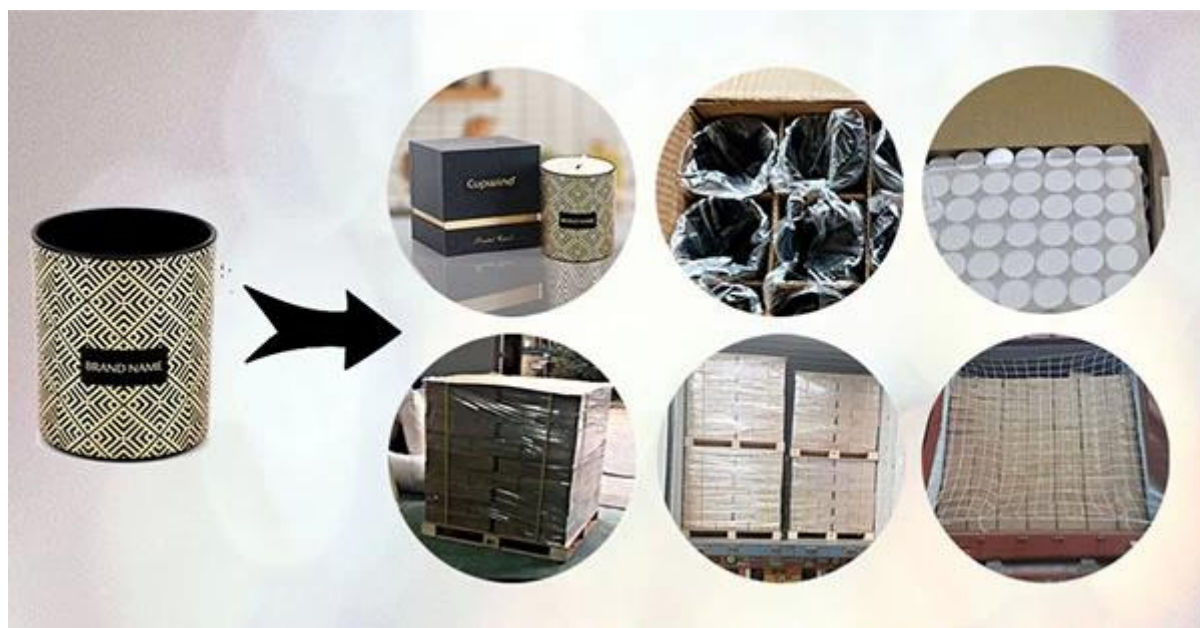

Гарантия качества

У нас есть собственная обученная и опытная команда контроля качества, которая проверяет качество продукции от начала производства до конца, у нас будет внутренний отчет контроля качества на английском языке, чтобы показать вам перед отправкой.

Все наши стеклянные банки для свечей тестируются третьей стороной. Обычно мы используем тесты Cali 65 Pro, тесты ASTM (отжиг и тепловой удар), тесты на свинец и кадмий.



TEST REPORT



(8521)097-0435
Page 3 of 4

SHENZHEN JIERUIMA TRADING CO., LTD
NO.415 RUNLIAN BUILDING, SHENZHU ROAD,
HENGANG, 518115, SHENZHEN, CHINA

LAB LOCATION: SHENZHEN
LAB NUMBER: (8521)097-0435

ATTN: EMMA ZOU
CC: emma@cupwind.com

DATE IN: APR 07, 2021
MOD. LOG IN: /
DATE OUT: APR 13, 2021
REVISED DATE: /
WORKING DAYS: 5
PAGE: 2 OF 4

OVERALL RATING	
PASS	X
FAIL	
DATA	

TESTING FOR
CA 65 LEAD & CADMIUM ON NON-FOOD /
BEVERAGE GLASSWARE-EXTERIOR

Sample Description:	IRIDESCENT COATING CANDLE JAR		
Manufacturer:	CUPWIND COOPERATED	P.O. No.:	/
Buyer:	IPSY	Style:	/
Country of Origin:	CHINA	Country of Destination:	USA
Color:	IRIDESCENT	SKU Number:	ITEM# 8090
Brand name:	CUPWIND®		
Re-test:	Yes: ☐	No: ☒	Charge Vendor: Yes: ☐ No: ☐
Previous Report No.:	/		

EXECUTIVE SUMMARY:

Test content		Result/Rating
CA 65 Lead & Cadmium on non-food/beverage glassware-exterior		Meet/Pass
Effectiveness of annealing	ASTM F2179-20 Sec. 4.2 (Mod)	M PASS
	With a tungsten carbide scribe, scratch once around the inside knuckle of the article. Then scratch an "X" across the entire inside bottom surface of the article. All scratches are to be made using sufficient pressure to just penetrate the surface of the glass. Fill each article with water at the same room temperature as the glass. Wait 15 minutes, then empty the water and examine each piece for fractures. Shall show no fractures. Report the number of fractures, if any, for each test. Modification: expanded scope to all other glass products in addition to candle containers.	
Thermal shock	ASTM F2179-20 Sec. 4.2 (Mod) / ASTM C149	M PASS
	Shall not crack or break after tested per below - prepare a cold-water bath at $21 \pm 1.1^{\circ}\text{C}$ ($70 \pm 2^{\circ}\text{F}$). - prepare a hot bath at $71 \pm 1.1^{\circ}\text{C}$ ($160 \pm 2^{\circ}\text{F}$). - immerse the sample completely in the hot water bath and allow to soak for $5 \text{ min} \pm 10 \text{ s}$. - transfer the sample to the cold bath, and immerse for at least 30 s. - remove the sample from the cold bath and examine the sample for any cracking. Note: - the hot water that collects within the container during the first immersion shall be retained in the container through the second immersion - the time of transfer from the hot bath to the cold bath shall be $15 \pm 1 \text{ s}$ Modification: sampling procedure not followed and expanded scope to all other glass products in addition to candle containers.	

REMARK:

1. No enclosed protocol for test results in this report.